

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.
5. LEASE DESIGNATION AND SERIAL NO.

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

9. WELL NO.

10. FIELD AND POOL, OR WILDCAT

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

12. COUNTY OR PARISH 13. STATE

SUNDRY NOTICES AND REPORTS ON WELLS
(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☒ OTHER

2. NAME OF OPERATOR
El Paso Natural Gas Company

3. ADDRESS OF OPERATOR
Box 500, Farmington, New Mexico

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface
000'N, 000'E

14. PERMIT NO. 15. ELEVATIONS (Show whether DF, RT, GR, etc.)
5575'DE

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data



NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐	WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐	FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☐	SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
REPAIR WELL ☐	CHANGE PLANS ☐	(Other) ☐	

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

This well was temporary, abandoned in 1961, by cutting tubing at 311' and spotting a 100 sack cement plug, the top of which is at 3500'. It is now intended to plug and abandon this well as follows:

1. Cut and pull the portion of the 7" casing string which is free.
2. Spot a 50 sack cement plug on 7" casing stub and spot a 50 sack cement plug at the base of the Ojo Alamo. If the Ojo Alamo is not exposed by pulling the 7" casing, perforate and squeeze at the base of the Ojo Alamo to isolate the zone from deeper gas bearing strata.
3. Spot a 25 sack cement plug at base of surface casing and at the surface.
4. Install a dry hole marker and restore location to original contours.

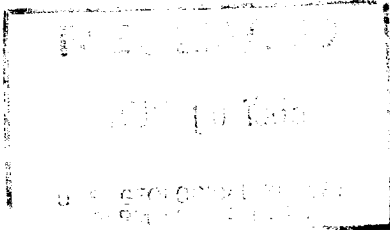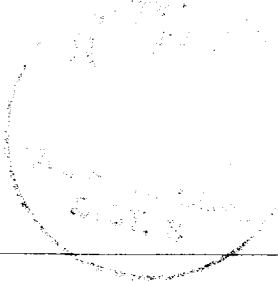

18. I hereby certify that the foregoing is true and correct
SIGNED Original Signed F. H. WOOD TITLE Petroleum Engineer DATE 6-10-65

(This space for Federal or State office use)

APPROVED BY _____ TITLE _____ DATE _____
CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment ; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise ; depths (top and bottom) and method of placement of cement plugs ; mud or other material placed below, between and above plugs ; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole ; method of closing top of well ; and date well site conditioned for final inspection looking to approval of the abandonment.