

NO. OF COPIES RECEIVED	6
DISTRIBUTION	
SANTA FE	1
FILE	1
U.S.G.S.	
LAND OFFICE	
OPERATOR	4

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease	
State <input type="checkbox"/>	Fee <input type="checkbox"/>
5. State Oil & Gas Lease No. X	
7. Unit Agreement Name	
8. Farm or Lease Name	
9. Well Shop	
10. Field and Pool, or Wildcat Bloomfield, New Mexico	
12. County San Juan	


SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER-	2. Name of Operator
3. Address of Operator Lynn and McCoy	4. Location c/o Box 2088 Santa Fe, New Mexico 87501
UNIT LETTER M FEET FROM THE 115 South LINE AND 200 FEET FROM THE West LINE, SECTION 15 TOWNSHIP 29 N. RANGE 11 W. NMPM.	
15. Elevation (Show whether DF, RT, GR, etc.)	

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data	
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>
OTHER <input type="checkbox"/>	OTHER <input type="checkbox"/>
PLUG AND ABANDON <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
CHANGE PLANS <input type="checkbox"/>	PLUG AND ABANDONMENT <input checked="" type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1703.

11-7-77 Rig up, dig cellar, chip cement from top of 8 5/8 casing and in between 5 1/2 casing and 8 5/8. Found top of 2" tubing with 1" sucker rod sticking out 4".
11-8-77 Bust cement from in side 5 1/2 casing and around 2" tubing, cut 5 1/2 casing off 5' below ground level. Take 1" overshot and pick up rods, lay down 27 5/8" rods. 2" tubing cemented in side first joint of 5 1/2 casing. Back 5 1/2 casing off 70' down.
11-9-77 Pick 2" tubing up and lay down 710'. Trip 2" back in hole.
11-10-77 Mix and spot 96 sacks cement down 2" tubing to 707'. Cement circulated back to surface, lay 2" tubing down.
11-11-77 Ran weight on line, found top of hard cement 34' from surface. Mix and spot 10 sacks cement in top of 8 5/8 casing 5' below surface. Move all equipment to yard. Clean up location.

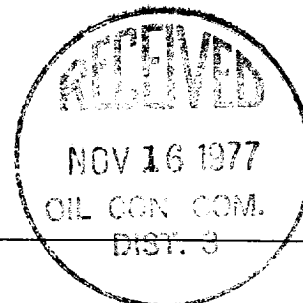

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED <u>[Signature]</u>	TITLE <u>SUPERVISOR DIST. #3</u>	DATE <u>NOV 10 1977</u>
APPROVED BY <u>[Signature]</u>		
CONDITIONS OF APPROVAL, IF ANY:		