

COPIES RECEIVED	3
DISTRIBUTION	
SANTA FE	1
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	1

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease	
State <input type="checkbox"/>	Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.	
7. Unit Agreement Name	
8. Farm or Lease Name	
C. Hare	
9. Well No.	
3	
10. Field and Pool, or Wildcat	
12. County	
San Juan	

**SUNDRY NOTICES AND REPORTS ON WELLS**  
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>
2. Name of Operator Bloomfield Oil & Gas Bedford, Inc. agent for and State of New Mexico
3. Address of Operator Box E, Farmington, New Mexico 87401
4. Location of Well UNIT LETTER <u>N</u> <u>230</u> FEET FROM THE <u>S</u> LINE AND <u>1530</u> FEET FROM THE <u>W</u> LINE, SECTION <u>15</u> TOWNSHIP <u>29N</u> RANGE <u>11W</u> NMPM.
15. Elevation (Show whether DF, RT, GR, etc.)


16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING CPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input checked="" type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

This well has been plugged & abandoned as follows:

9-30-78 Move in, rig up, try to get 2" tbg. in hole, tag up on something @ 20'  
10-2-78 Ran 1 1/2" in casin, wouldn't go. Ran 1" down hole between surf. casing  
& 6 5/8" to 76'  
10-3-78 Weld 6 5/8" casing to surface pipe, pump into formation  
10-4-78 Pump 50 sx. down 6 5/8" casing, W.O.C. Ran 1" down beside casing,  
fill w/25 sx  
10-5-78 Cut all casing off below plow depth, set 15 sx plug in top.  
Clean location.

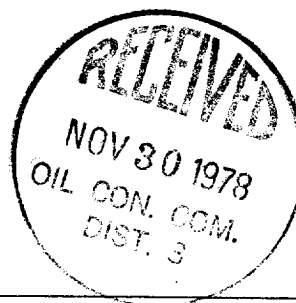

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED <u>Larry A. Bedford</u>	TITLE <u>Agent for State</u>	DATE <u>11-27-78</u>
APPROVED BY <u>AK Kendrick</u>	TITLE <u>Asst. Dir.</u>	DATE <u>NOV 30 1978</u>
CONDITIONS OF APPROVAL, IF ANY:		