

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPL
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM-28056

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Silver Fed A #1

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Allison-Penn

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 20-T8S-R37E

12. COUNTY OR PARISH 13. STATE

Roosevelt New Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL GAS WELL OTHER

2. NAME OF OPERATOR
JFG ENTERPRISES

3. ADDRESS OF OPERATOR

P.O. Box 100, Artesia, N.M. 88210

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.)
At surface

1980 FSL & 1980 FEL Sec. 20 - T8S - R37E.

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

GR-4033 Ft.

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

TEST WATER SHUT-OFF

PULL OR ALTER CASING

WATER SHUT-OFF

REPAIRING WELL

FRACTURE TREAT

MULTIPLE COMPLETE

FRACTURE TREATMENT

ALTERING CASING

SHOOT OR ACIDIZE

ABANDON*

SHOOTING OR ACIDIZING

ABANDONMENT*

REPAIR WELL

CHANGE PLANS

(Other)

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Plug and Abandon: As per Pete Chester instruction.

4-23-81


Rig up with Halliburton & Plugged & Abandon.

Set 40 sack plug with bottom of plug at 5767 ft.
Filled with mud to 4231 feet.

Set 40 sack plug with bottom of cement at 4231 ft. Set in and out of 7" and 9 5/8".

Filled with mud and set 10 sack plug at surface. Install dry hole marker.

Filled pits. Cleaned location. Ready for inspection.

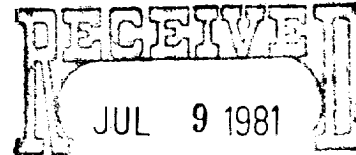

OIL & GAS
U.S. GEOLOGICAL SURVEY
ROSWELL, NEW MEXICO

18. I hereby certify that the foregoing is true and correct

SIGNED *[Signature]*

TITLE Agent

DATE 7-8-81

(This space for Federal or State office use)


APPROVED BY (Orig. Sgd) ROGER A. CHAPMAN
CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

APPROVED
JAN 18 1982
FOR
JAMES A. CHILMAN
DISTRICT SUPERVISOR

*See Instructions on Reverse Side

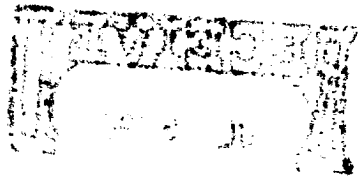

1900
JAN 20 1900
NEW YORK

1900

1900
JAN 20 1900
NEW YORK