

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease	State ☒ Fee ☐
5. State Oil & Gas Lease No.	B-1520
7. Unit Agreement Name	
8. Former Lease Name	Bridges State
9. Well No.	72
10. Field and Pool, or Wildcat	Vac (G-DA)
12. County	Lea

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. ☒ OIL WELL ☐ GAS WELL ☐ OTHER-

2. Name of Operator
Mahel oil Corporation

3. Address of Operator
Box 633, Midland, Texas 79701

4. Location of Well
UNIT LETTER P 660 FEET FROM THE South LINE AND 660 FEET FROM THE East LINE, SECTION 11 TOWNSHIP 17-S RANGE 34-E N.M.P.M.

15. Elevation (Show whether DF, RT, GR, etc.)
4041 CR.

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK ☐	REMEDIAL WORK ☐
TEMPORARILY ABANDON ☐	COMMENCE DRILLING OPNS. ☐
PULL OR ALTER CASING ☐	CASING TEST AND CEMENT JOB ☐
OTHER ☐	OTHER ☐
PLUG AND ABANDON ☒	ALTERING CASING ☐
CHANGE PLANS ☐	PLUG AND ABANDONMENT ☐

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

Plug & abandon as per attached Procedure

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED Christine O. Tucker TITLE Production Clerk DATE 1-5-73

PROVED BY Joe D. Ramey TITLE Dist. I. Supt. DATE 1-5-73

CONDITIONS OF APPROVAL, IF ANY.


WELL WORK RECOMMENDATIONS
Proposals for Well Reconditioning and Subsurface Maintenance
Workovers, Expense DD's, PB's, and Conversions

Lease: BRIDGES STATE Well No. 72
Field: VACUUM - SAN ANDRES FLOOD
County: LEA State: NEW MEXICO

RECOMMENDED PROCEDURE:

1. RUN 2" TUBING w/ CEMENT RETAINER. SET RETAINER AT 4340' & SQUEEZE OPEN HOLE
2. CIRCULATE HOLE TO MUD LADEN FLUID.
3. DETERMINE FREE POINT OF 5 1/2" CSG - CUT OFF CASING & PHL
4. SPOT 100' CEMENT PLUG (355x), 50' ABOVE & 50' BELOW CUT OFF POINT
IF CUT OFF POINT IS BELOW 1700' SET ANOTHER 100' PLUG FROM 1700' TO 1800'
5. SPOT 100' CEMENT PLUG (555x) FROM 781' TO 881'
6. SPOT 10 5x CEMENT PLUG AT SURFACE.
7. CUT OFF WELL HEAD & INSTALL MARKER

DIAGRAMMATIC WELL SKETCH
B & ES STATE WELL, ' ' ' ?
VACUUM- SAN ANDRES FLOOD
LEA COUNTY - NEW MEXICO

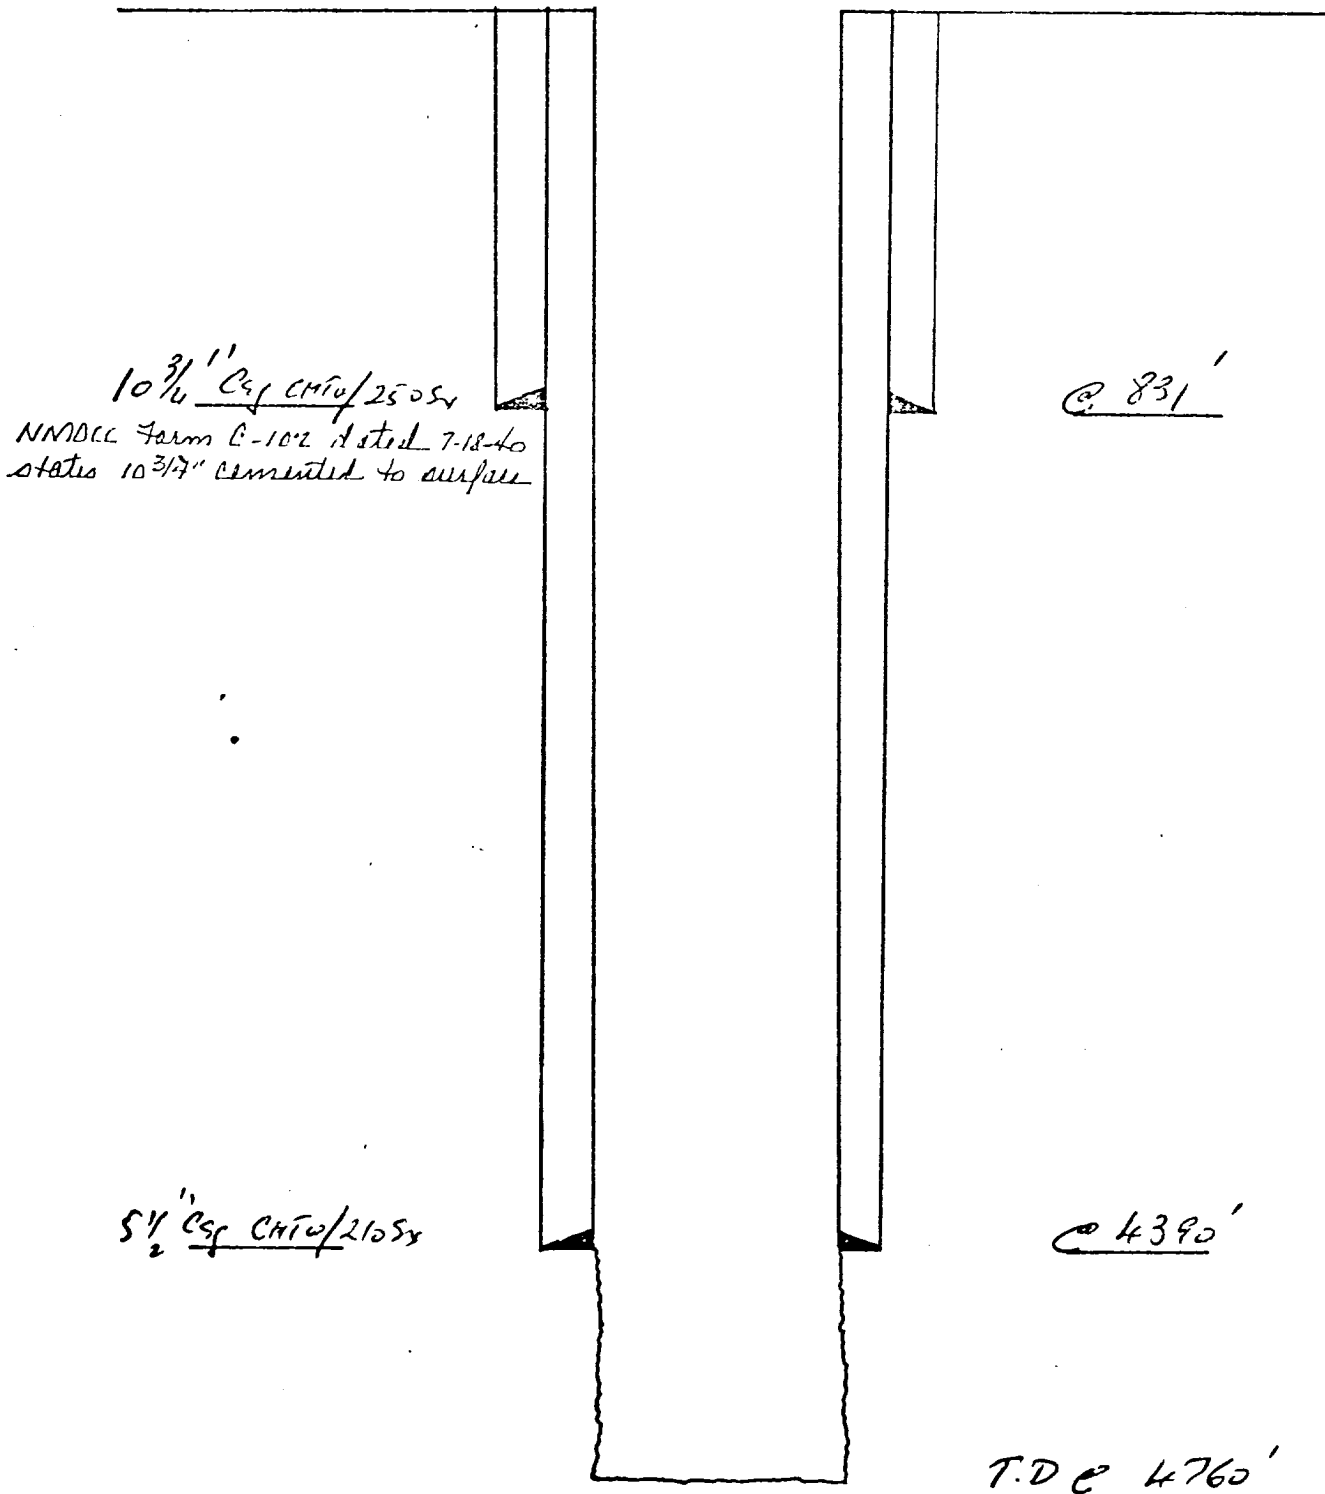

NO TUBING IN THE HOLE