


Operator Tennessee Oil Co.  
 Well Plains SL 115 #1  
 Unit B Section 19 Township 10 Range 28  
 API # 30-025-6270

TOPS

Lyons	430'
TPillers	880'
Quasar	1045'
San Andrae	1565'
Glorieta	2760'
Tubb	4240'
Abo	5025'
Calfcamp	5760'
Pann	6290'
Citaku	6440'
Miss	6652'
Siluro-Devonian	

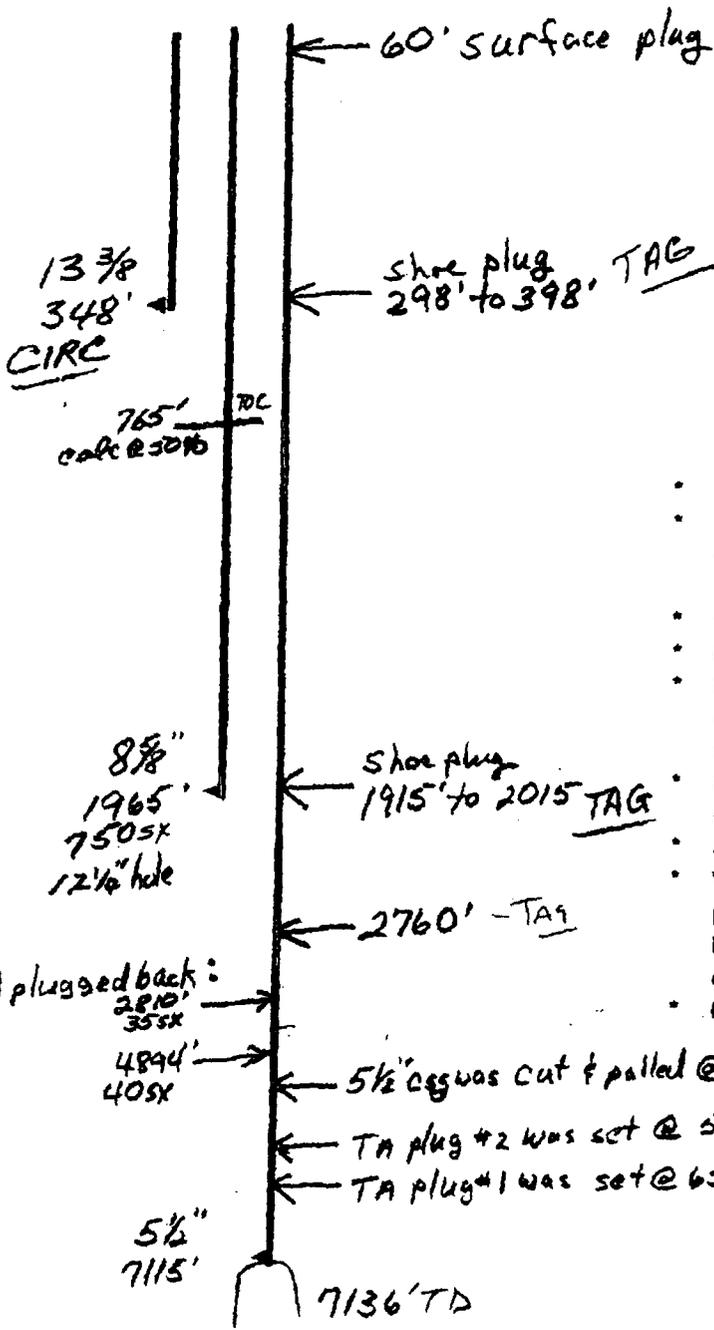

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- Install dry hole marker as per Rule 202.B.2
- Plugs are to be set from point indicated up.
- Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

MLB

OCD Exhibit 3  
 Case No 13714  
 Perm O & 2006