


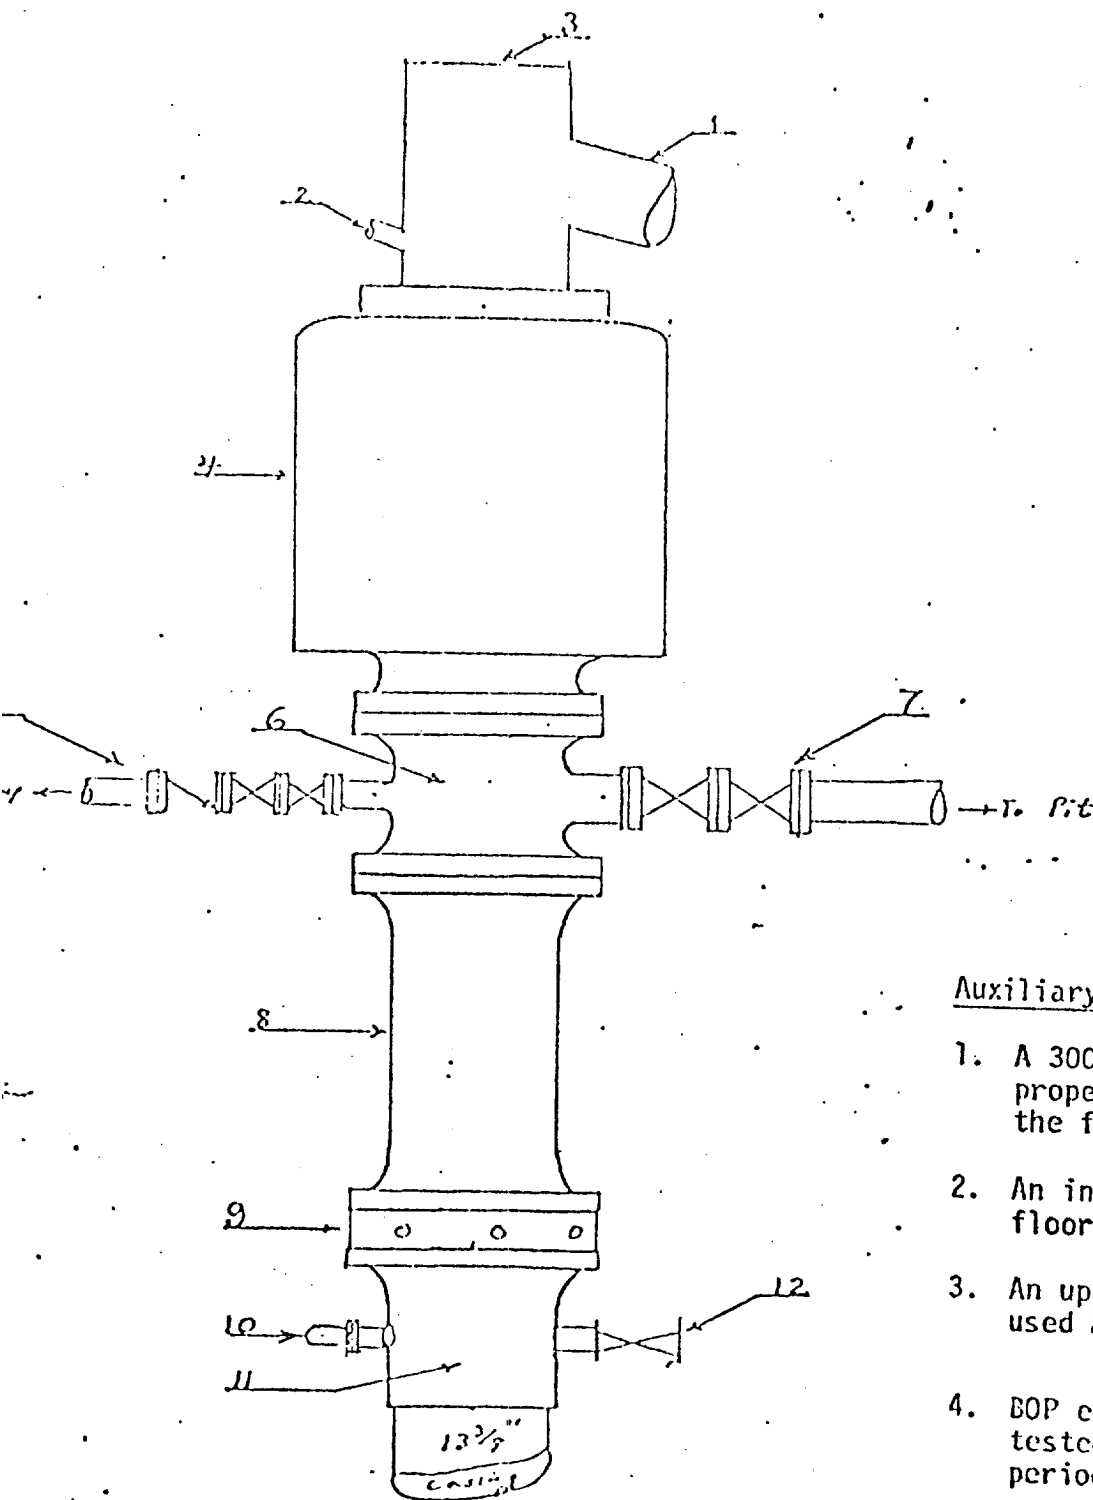

RECEIVED

SEP 4 1974

U. S. GEOLOGICAL SURVEY
DENVER, COLOR.

Auxiliary Equipment and Notes:

1. A 3000 psi WP safety valve, properly subed, shall be on the floor at all times.
2. An inside BOP shall be on the floor at all times.
3. An upper kelly cock to be used at all times.
4. BOP equipment shall be pressure tested upon installation and periodically thereafter.

Qm	Description
	Mud return flow line
	Fill up line (min. of 2")
	Drilling nipple
	12" 3000 psi WP - annular bag type BOP
	two valves, one check - 3000 psi WP, 2" size
	12" 3000 psi WP choke spool
	two valves - 3000 psi WP, 4" size
	12" 3000 psi WP spacer drilling spool
	12" 3000 psi WP wear sleeve hold-down flange
	bull plug 2" & companion flange
	12" 3000 psi well head - slip on and weld on
	Flanged 2" valve and nipple - 3000 psi WP

Well Name Shell Isleta #1

Field Wildcat

County Valencia

State New Mexico

Attachment No. _____