


Operator Cibola Energy Corp.
 Well J P White #9
 Unit 0 Section 18 Township 10 Range 28
 API# 30-005-60543

TOPS

Latos	418'	*
Rivers	490'	
Green		
Grayburg	1560'	
San Andres	2142'	

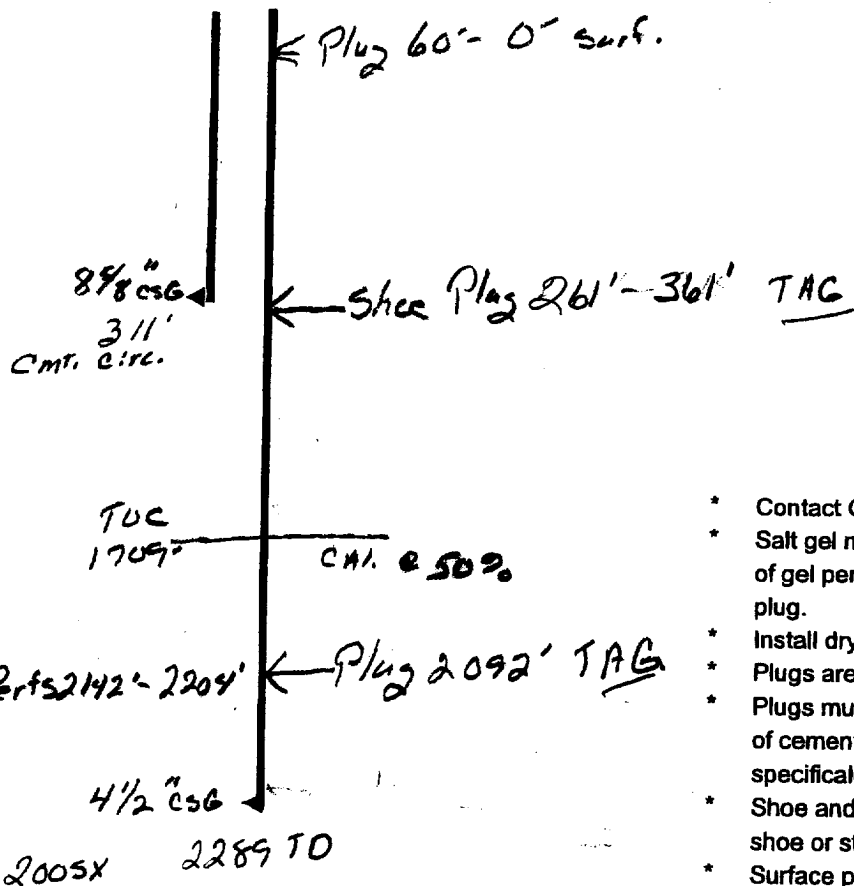

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

[Handwritten signature]