

COMPANY <i>Southeastern Pet. Inc.</i>		PROPERTY NAME <i>Fogo State</i>	WELL NO. <i>1</i>
DATE	LOCATION (ULSTR) <i>P-116-7-28</i>	FOOTAGE <i>660 FS + EL</i>	
API NO. <i>30-015-60915</i>		POOL <i>Elkins San Andres</i>	

1. Spot a 75 sx plug & 2300' w/c & tag
2. Perforate 4 1/2" & 300'
3. Circulate cement from 300' up backside of 4 1/2" to surface
4. Fill 4 1/2" w/ cement from 300' to surf.
5. Place salt-gel between plugs & 25 lb to bbl of brine water.
6. Set P+A marker, cut anchors clean & level location

CASING RECORD:

8 5/8" & 250' w/ 160 sx 12 1/4" hole


4 1/2" & 2523' w/ 150 sx 7 7/8" hole

Pert & 2293' S.A.

Top S.A. 1660

Top Qu. 1212

TOC 1654'

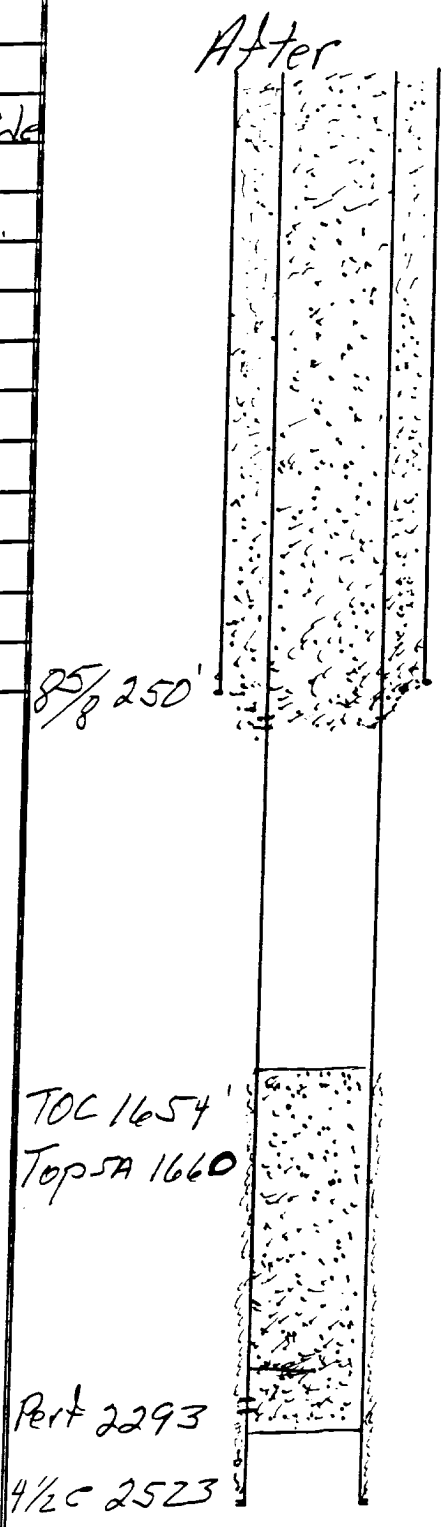

TOC 1654'

Top SA 1660

Pert 2293

4 1/2" & 2523'