


Operator Cibola Energy Corp.  
 Well Whitney #2  
 Unit 2 Section 34 Township 10 Range 27  
 API # 30-025-60916

TOPS

Wares	246'	*
7 Rivers	354'	
Queen	907'	
Grayburg	1207'	
San Andres	1452'	

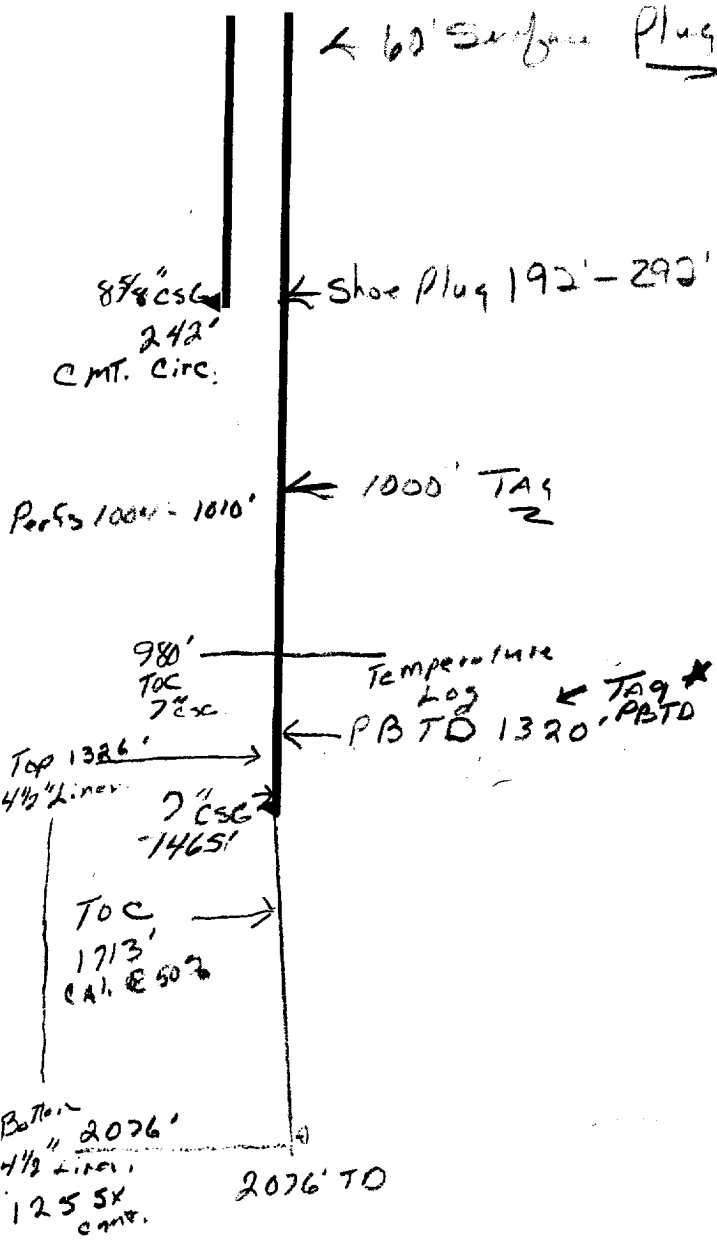

- \* Contact OCD 24 hrs. prior to any work done.
- \* Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- \* Install dry hole marker as per Rule 202.B.2
- \* Plugs are to be set from point indicated up.
- \* Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- \* Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- \* Surface plug will be from 0' - 60'
- \* Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- \* Plugs to be tagged will be indicated.

★ If PBTD not @ 1320' - Put Plugs As Follows -  
 1415' - to - 1515' TAG  
 1276' - 1376'

PT