


|                                   |                                   |                               |               |
|-----------------------------------|-----------------------------------|-------------------------------|---------------|
| COMPANY<br>Southeastern Pet. Inc. |                                   | PROPERTY NAME<br>Lusk         | WELL NO.<br>1 |
| DATE                              | LOCATION (ULSTR)<br>E sec 22-7-28 | FOOTAGE<br>1980 FNL + 660 FWL |               |
| API NO.<br>30-nas-61242           |                                   | POOL<br>Elkins San Andres     |               |

1. Spot a 75 sx plug e 2315' WOC + tag
2. Perforate 4 1/2 e 475' + circulate cmt to surface behind 4 1/2 csg.
3. Leave 4 1/2 csg. full from 475' to surface
4. Place salt-gel between pluggs e 25 lb per bbl of brine water.
5. Set P+H marker, cut anchors, clean + level location

CASING RECORD:

8 5/8 e 424' 250 SX 12 1/4" hole  
 4 1/2 e 2550 150 SX 7 7/8" hole  
 TOC e 1681'  
 Top SA e 1688'  
 Perts e 2303'

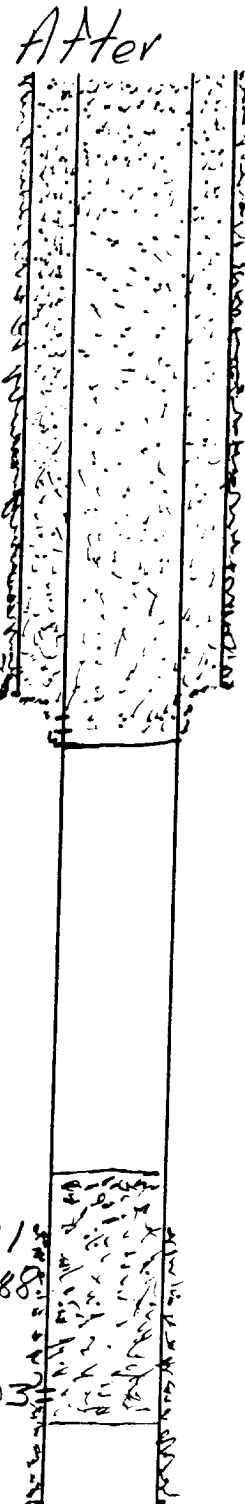

8 5/8 424'

TOC 1681'

Top SA 1688'

Perts 2303'

4 1/2 e 2550'