


Operator Tennessee Oil Co.
 Well Plains SL 114 #1
 Unit 15 Section 19 Township 10 Range 28
 API # 30-005-62270

TOPS

Lyates	430'
Trivers	880'
Queen	1045'
San Andres	1565'
Glenister	2760'
Tubb	4240'
Abe	5025'
Wolfcamp	5760'
Penn	6290'
Atoka	6440'
Miss	6652'
Siluro-Devonian	8

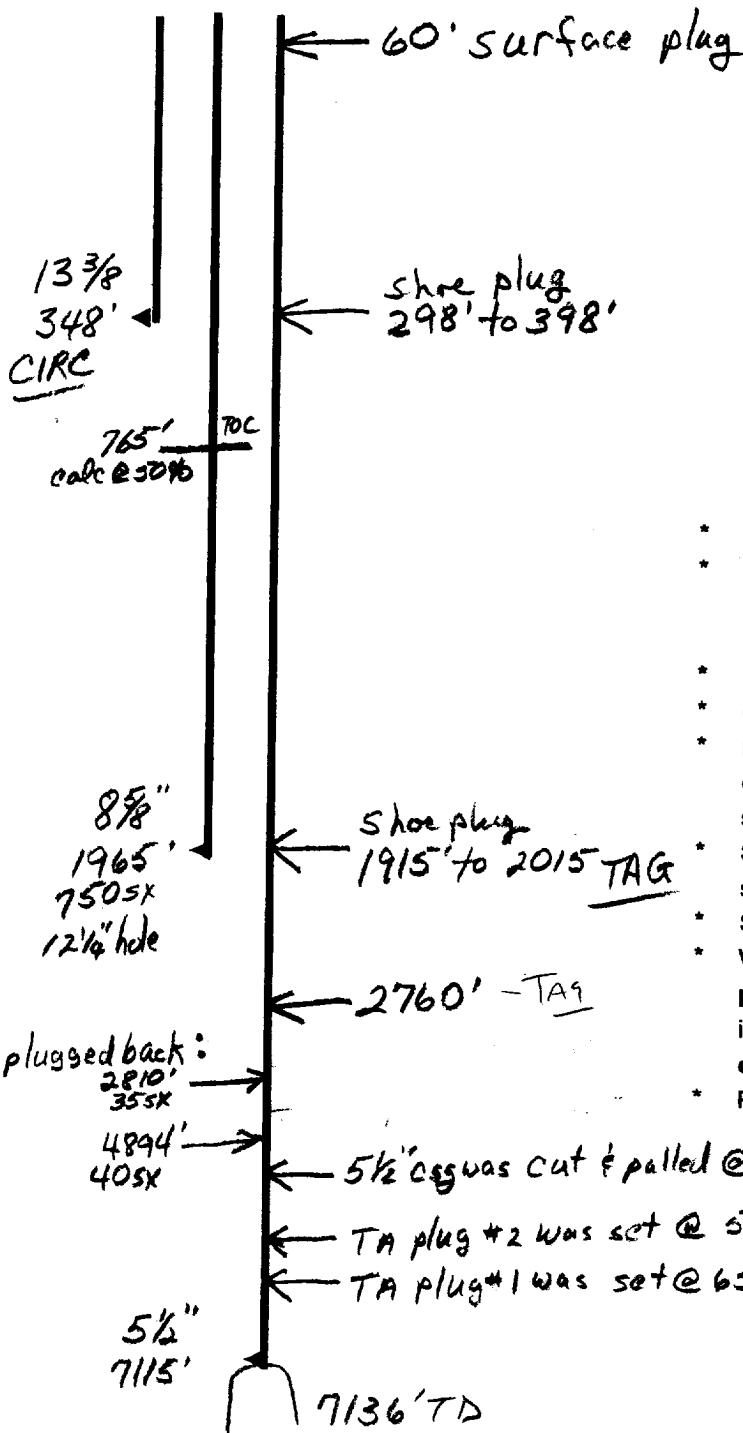

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

5 1/2" csg was cut & pulled @ 5080' No Record of csg run after 5 1/2" pulled

TA plug #2 was set @ 5750' to 5770' } in place now
 TA plug #1 was set @ 6500' to 6678' }

MLB