


Operator Spruce Production Company
 Well O'Brien #1
 Unit C Section 25 Township 7 Range 29
 API # 30-005-62346

TOPS

Wells	1232
Shoe Andrus	2378
Chlorine	3525
Tubb	5013
Ad	5780
Circle (Penn)	7050
Mills	7510
S.D	7988

Wolfcamp 26400

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

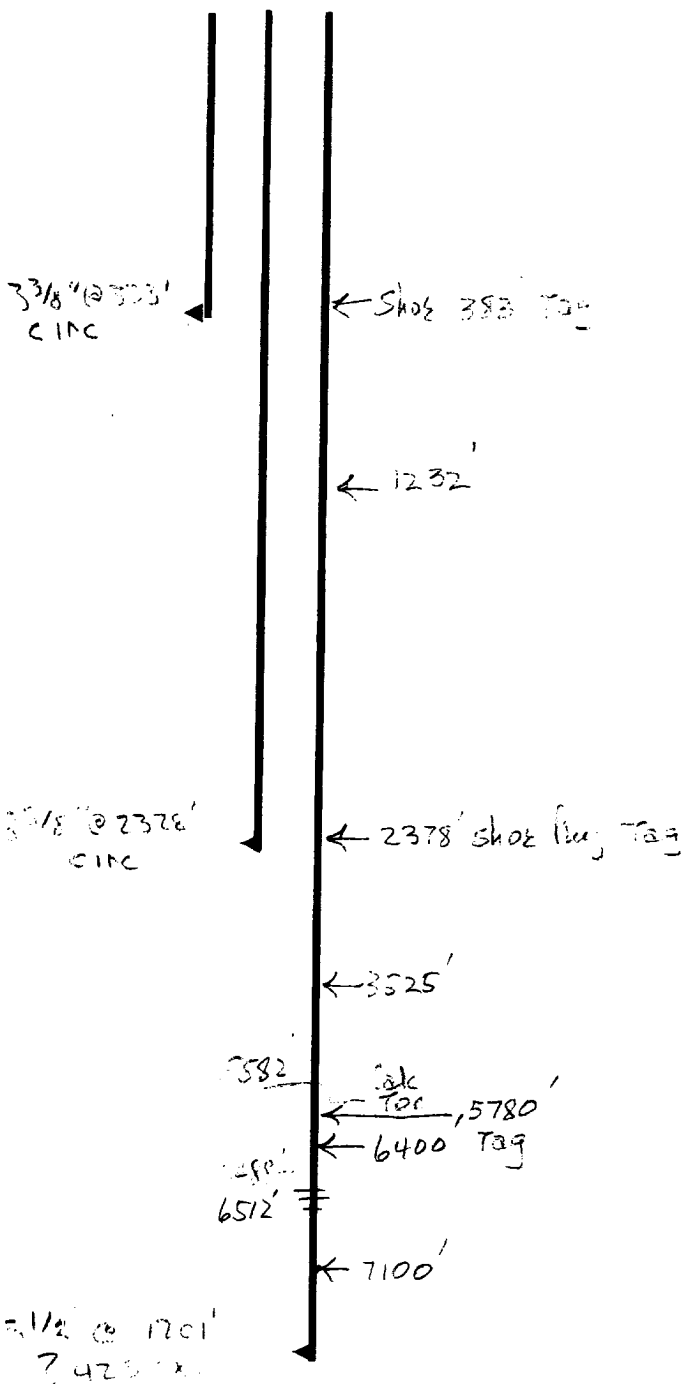

10