


COMPANY C.H. Juni		PROPERTY NAME State #2	WELL NO. 2
DATE 1-15-29 - B	LOCATION (ULSTR) 1-15-29 - B		FOOTAGE 660 FN + 1650 FEL
API NO. 30-005-60156		POOL Double L Queen	

1. Run in hole w/tbg to 1930' + spot a 40 sx plug. WOC + tag plug
2. Load hole w/salt-gel @ 25 lb per bbl. of brine to 360'.
3. Pull up hole to 360' w/tbg + circulate cement to surface. Let cement spill over into the back side if possible to fill the void behind the 5 1/2" at the surface, or try to fill by other means.
4. Set P+H marker
5. Cut anchors, clean + level location.

CASING RECORD:

8 5/8" @ 292' - 250 SX Hole 12 1/2"
 5 1/2" @ 1956 250 SX Hole 7 7/8"
 Cal. TOC @ 52'

After

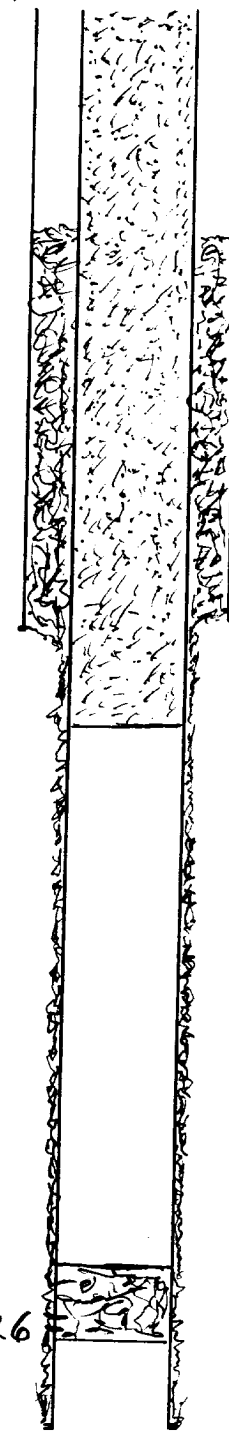

8 5/8" @
 292'

Perts 1926

5 1/2" @
 1956