

COMPANY C.H. Juni	PROPERTY NAME State #2	WELL NO. 2
-----------------------------	----------------------------------	----------------------


DATE	LOCATION (ULSTR) 1-15-29 - B	FOOTAGE 660 FN + 1650 FEL
------	--	-------------------------------------

API NO. 30-005-60156	POOL Double L Queen
--------------------------------	-------------------------------

1. Run in hole w/tbg to 1930' + spot a 40 sx plug, WOC + tag plug
2. Load hole w/salt-gel @ 25 lb per bbl. at b.c. to 360.
3. Pull up hole to 360' w/tbg + circulate cement to surface. Let cement spill over into the back side if possible to fill the void behind the 5 1/2" at the surface, or try to fill by other means.
4. Set P+H marker
5. Cut anchors, clean + level location.

CASING RECORD:

8 5/8" @ 292' = 250 sx Hole 12 1/2"
 5 1/2" @ 1956 250 sx Hole 7 7/8"
 Cal. TOC @ 52'

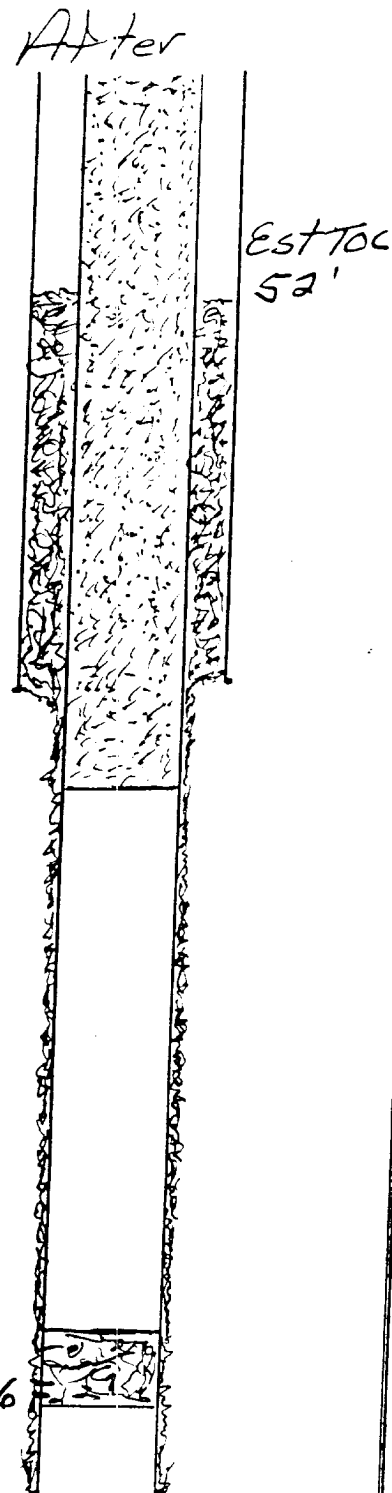

Perts 1926

5 1/2" @
1956