


Operator Pronghorn Mgmt. Corp.
 Well Heman #1
 Unit H Section 36 Township 17 Range 27
 API # 30-015-00669

TOPS

Rustler	330
Rivers	500
Bowers	840
Queen	1035
Grayburg	1498
San Andres	1805

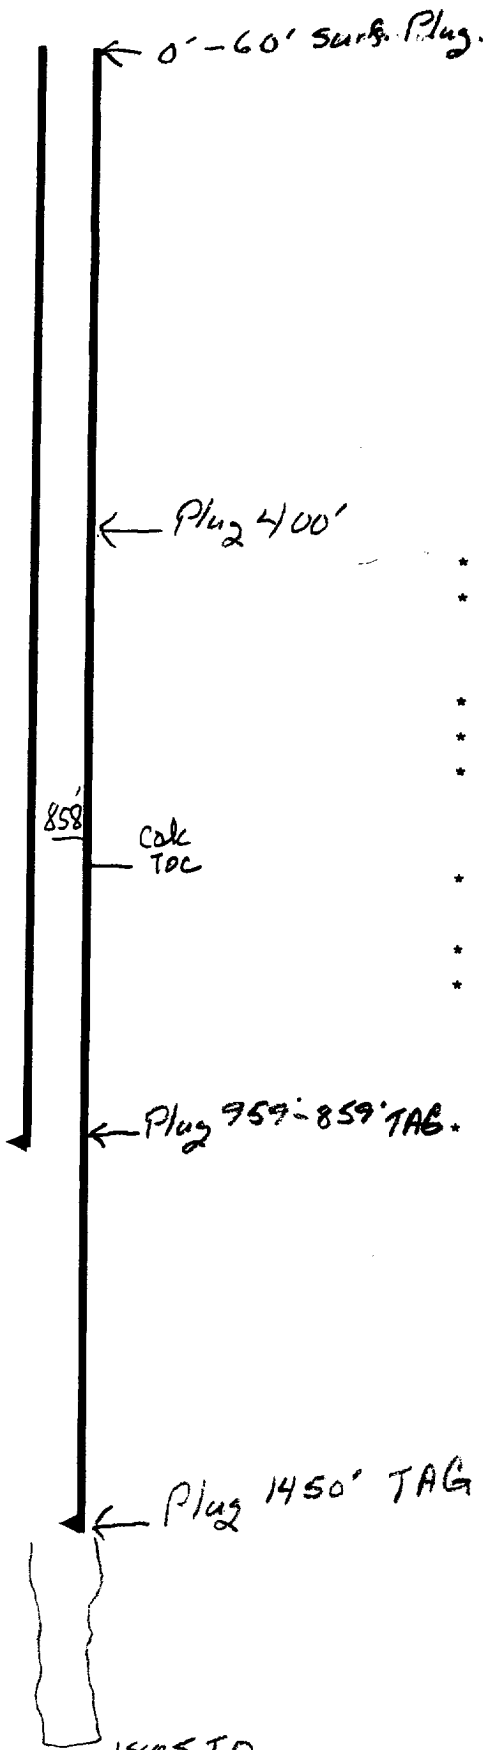

- * Contact OCD 24 hrs. prior to any work done.
 - * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
 - * Install dry hole marker as per Rule 202.B.2
 - * Plugs are to be set from point indicated up.
 - * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
 - * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
 - * Surface plug will be from 0' - 60'
 - * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

8 1/2" 909

TOC 858'

7" 1450'
10050

10050

[Handwritten signature]