


Operator Kersey & Donohue  
 Well Federal #  
 Unit p Section 3 Township 17s Range 28e  
 API # 30-015 - 01310

TOPS

ates \_\_\_\_\_  
 . Salt 265'  
 B. Salt 375'  
 Glorieta \_\_\_\_\_  
 Bone Sp. \_\_\_\_\_  
 Abo \_\_\_\_\_  
 Wolfcamp \_\_\_\_\_  
 Morrow \_\_\_\_\_  
 Devonian \_\_\_\_\_  
 Fusselman \_\_\_\_\_  
 Other \_\_\_\_\_

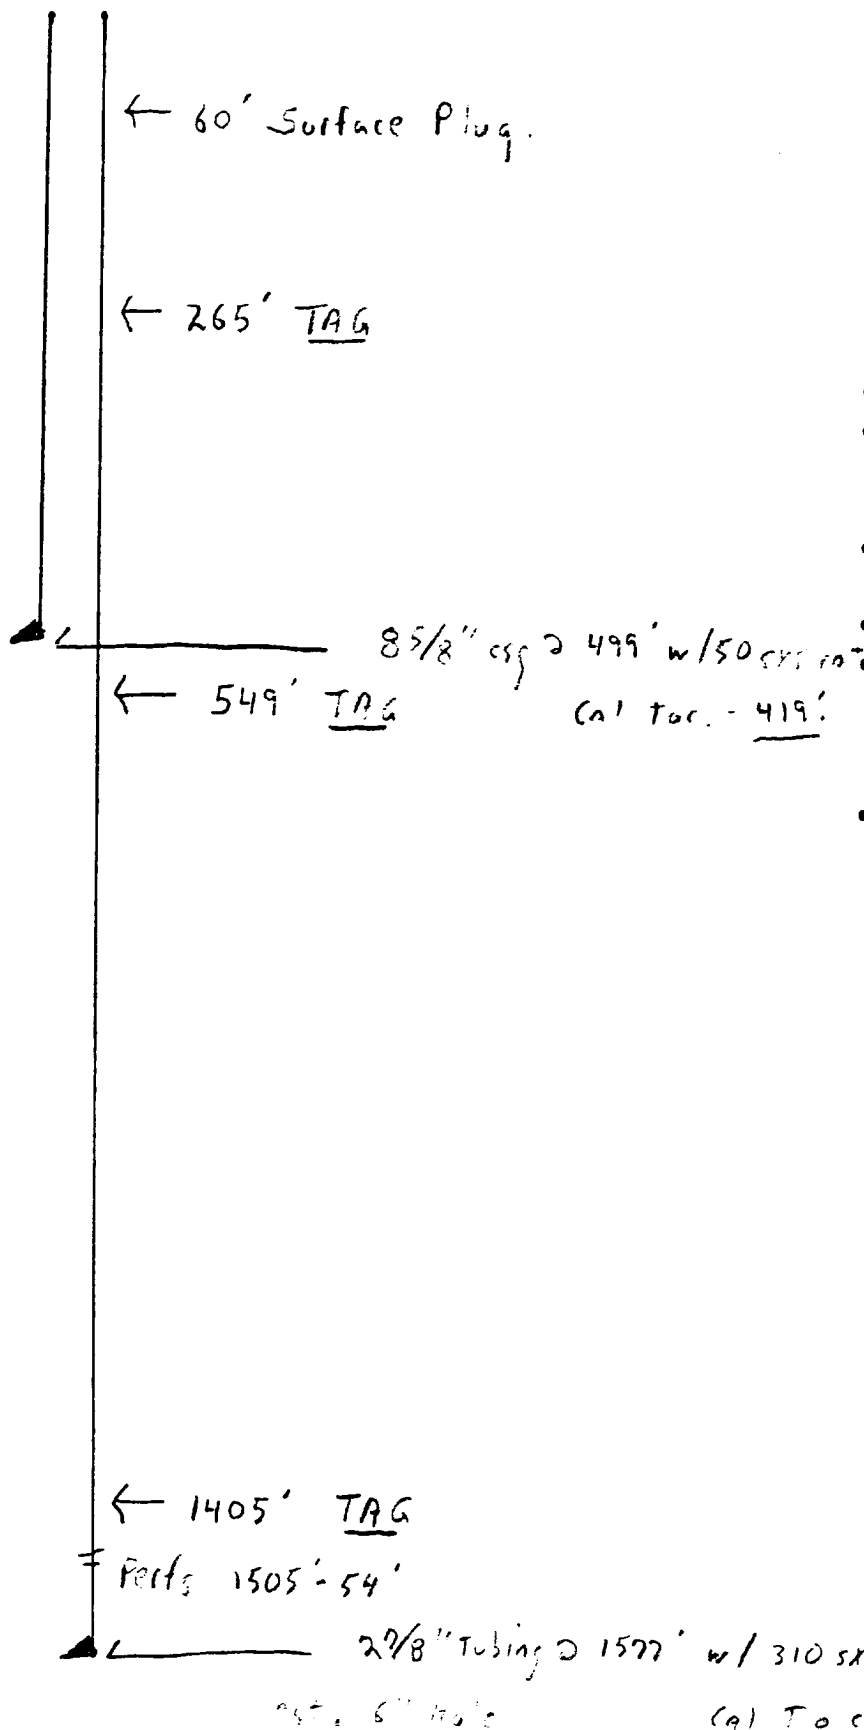

- Contact OCD 24 hrs. prior to any work done
- Salt gel mud consisting of 10# brine with 25 of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

16