


Operator Vintage Drilling Co.
 Well High Lanesme Pennsylv Unit # 5
 Unit 3 Section 15 Township 16 Range 24
 API # 30-0 15-02721

TOPS

Salade	420	*
B Salt	850	*
Yates	2 950	*
T Rivers	2 1250	
Bowers	2 1550	
Queen	1880	

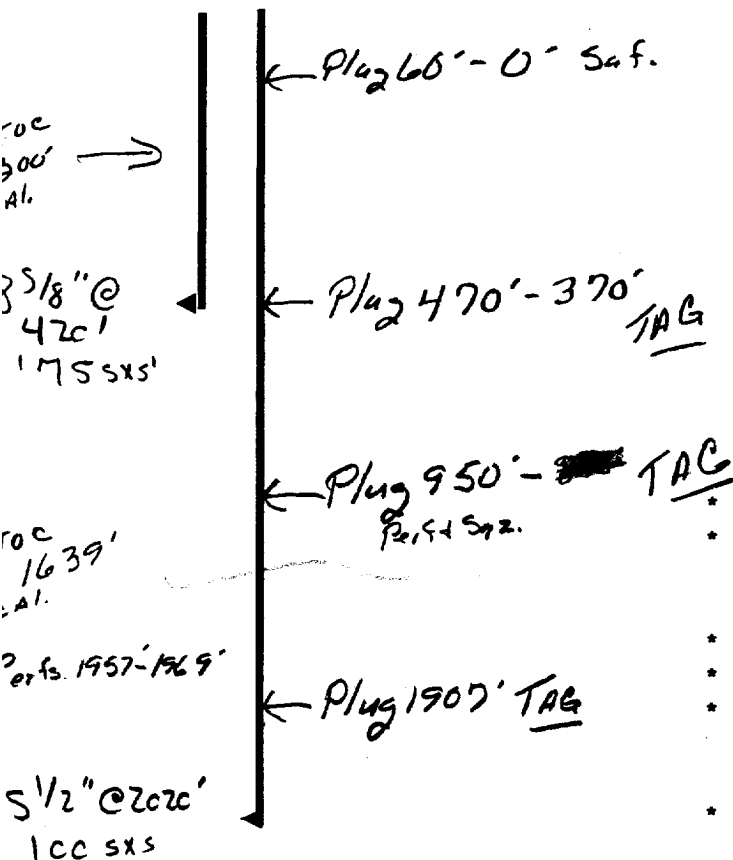

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.