


Operator Vintage Drilling Co.
 Well High Limestone Portage Unit #4
 Unit PJ Section 15 Township 16 Range 29
 API # 30-015-02731

TOPS

Salada	415'
B Salt	810'
Gates	~ 950'
Rivers	~ 1250'
Brumers	~ 1550'
Queen	~ 1850'

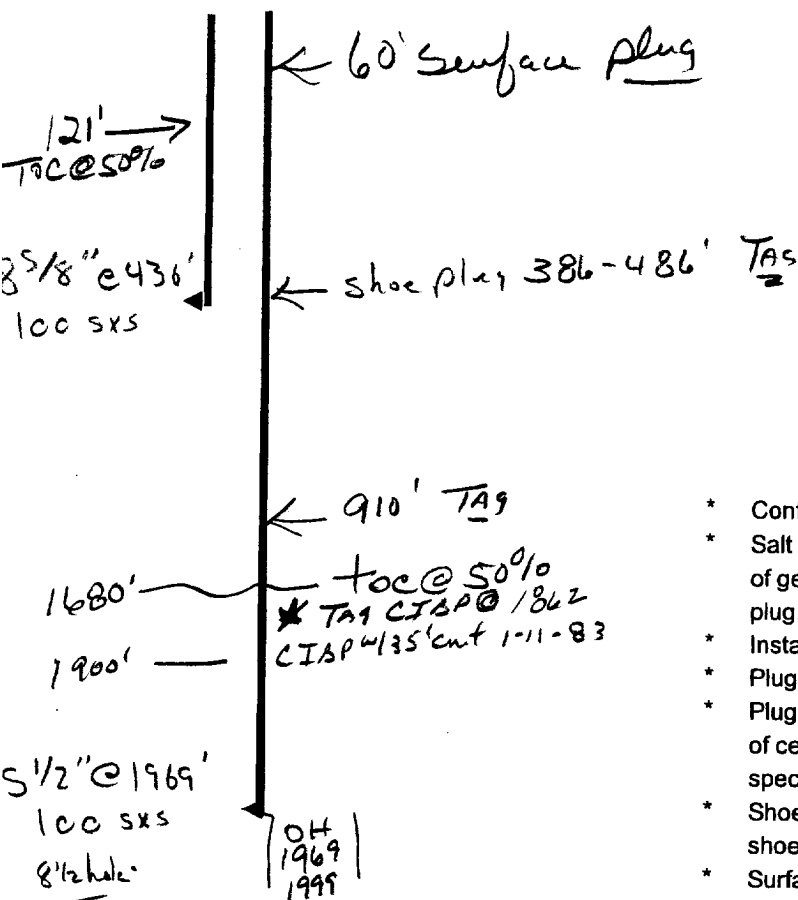

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of **all** casing string(s) in the correct footage or sacks required, **if no cement exists.**
- * Plugs to be tagged will be indicated.

7" cas @ 1829' pulled

* IF NO CIAP. set plug @ 1969' : TAG