

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPPLICATE*
(Other instructions on re-
verse side)

Budget Bureau No. 1004-0133
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT" for such proposals.)

RECEIVED

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐ INJECTION WELL
2. NAME OF OPERATOR PENROD OIL CORPORATION
3. ADDRESS OF OPERATOR P.O. Box 5970, Hobbs, New Mexico 88241
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface
UNIT LETTER C 330' FNL & 2310' FWL of SECTION 10, T16S, R30E
LEA COUNTY, NEW MEXICO
14. PERMIT NO.
15. ELEVATIONS (Show whether DF, RT, OR, etc.)
3859' DF

5. LEASE DESIGNATION AND SERIAL NO. LC-069641
6. IF INDIAN, ALLOTTEE OR TRIBE NAME
7. UNIT AGREEMENT NAME
8. FARM OR LEASE NAME W. HENSHAW PREMIER UNIT Tr 6
9. WELL NO. 7
10. FIELD AND POOL, OR WILDCAT WEST HENSHAW GB
11. SEC., T., R., M., OR BLE. AND SURVEY OR AREA SEC. 10, T16S, R30E
12. COUNTY OR PARISH EDDY
13. STATE NEW MEXICO

10. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐
FRACTURE TREAT ☐
SHOOT OR ACIDIZE ☐
REPAIR WELL ☐
(Other) ☐
PULL OR ALTER CASING ☐
MULTIPLE COMPLETION ☒
ABANDON* ☐
CHANGE PLANE ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐
FRACTURE TREATMENT ☐
SHOOTING OR ACIDIZING ☐
(Other) ☐
REPAIRING WELL ☐
ALTERING CASING ☐
ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

Propose to rig up and pull injection tbg. & pkr.
Set CITBP @ 2800' & spot ^{50 FEET} ~~2500~~ of cement.
Cut & pull 2500'± of 5 1/2" csg. spot.
Cement plug 50' in & 50' out out of the casing stub ^{TAG PLUG.} Set 5000. plug @ 1400'. TAG PLUG.
Set 50 000. plug 450-550'. TAG PLUG.
^{50 FEET} Set ~~70 000~~ plug @ surface. Install dry hole marker. Seed location.

18. I hereby certify that the foregoing is true and correct

SIGNED [Signature] TITLE President DATE 6/20/91

(This space for Federal or State office use)

APPROVED BY [Signature] TITLE Regional Director DATE 7/29/91

CONDITIONS OF APPROVAL, IF ANY: 887-6544

NOTIFY BLM AT (505) ~~393-3612~~ PRIOR TO COMMENCING PLUGGING OPERATIONS.
PLACE 9.0 PPg MUD BETWEEN PLUGS.

*See Instructions on Reverse Side

West Henshaw Premie Unit Tr-6


Well #7

Sec. 10, T16 S, R-30 E

Eddy County, NM


PRESENT

PROPOSED

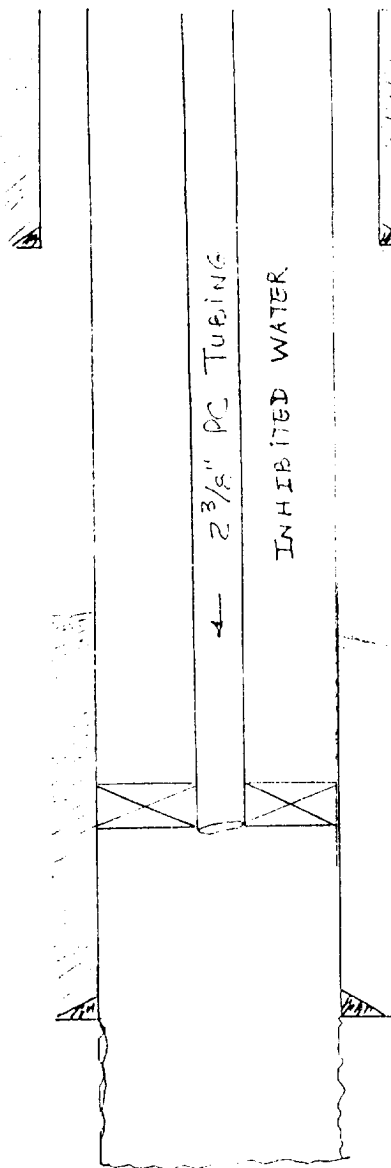

50 SXS. CMT.
plug @ surface.

10 3/4", 32# @ 483' w/ 155 SXS.

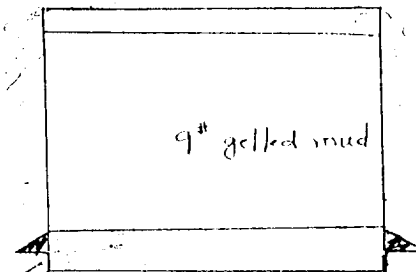

50 SXS. CMT.
plug in & out @
the base of 10 3/4"

Cut & pull 2500' of 5 1/2"
50 SXS. CMT plug @ stub


Calc. TOC 2650'

Tension pkr @ 2810'

CIBP @ 2800'
w/ 25 SXS.

5 1/2", 14# @ 2847' w/ 100 SXS.

O.H. TD 2847' - 2910'

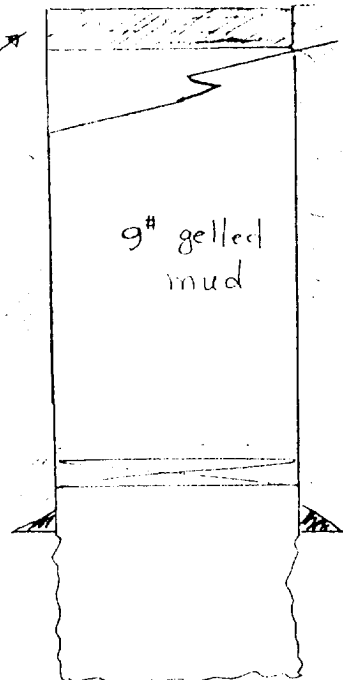

RECEIVED
JUL 10 11 28 AM '91
CARTER
AREA