


Operator Stratton Production Co.
 Well Norman Federal #1
 Unit K Section 14 Township 16 Range 30
 API # 30-015-22748

TOPS

| | |
|------------|------|
| Salado | 2350 |
| Base Salt | 1250 |
| Yates | 1424 |
| TRivers | 1592 |
| Queen | 2232 |
| Granburg | |
| San Andres | 2952 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

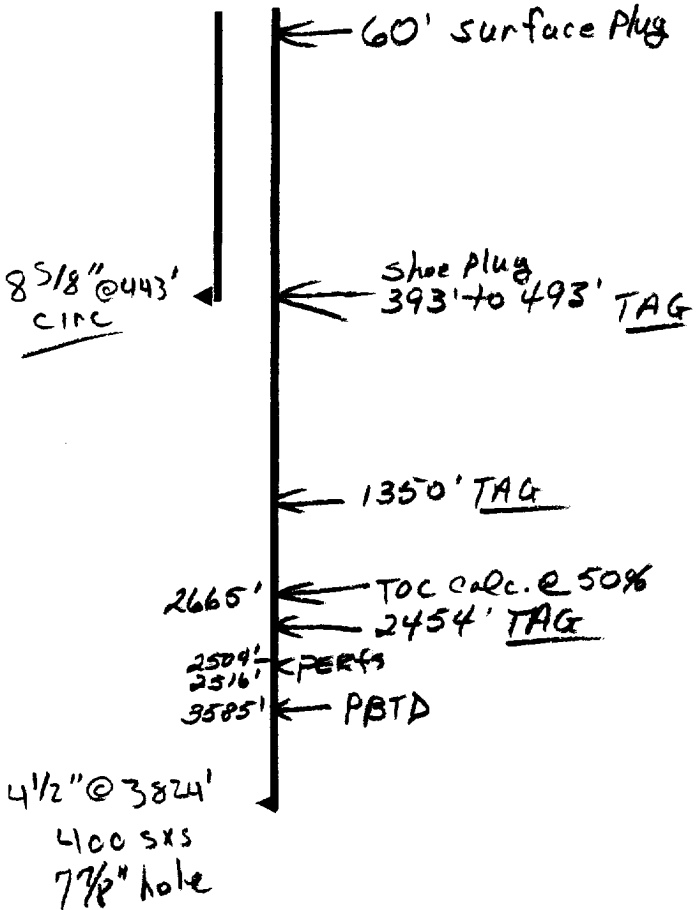

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

MLB