


NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	<input checked="" type="checkbox"/>
FILE	<input checked="" type="checkbox"/>
U.S.G.S.	<input type="checkbox"/>
LAND OFFICE	<input type="checkbox"/>
OPERATOR	<input checked="" type="checkbox"/>

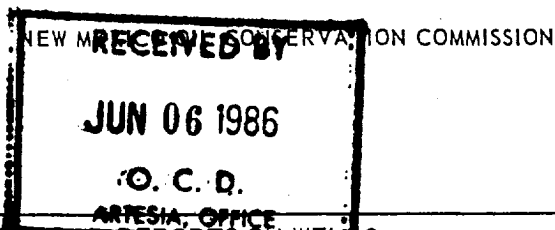

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease
State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.
B-2178

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR.
USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER-	7. Unit Agreement Name
2. Name of Operator TXO Production Corp.	8. Farm or Lease Name Empire State Com.
3. Address of Operator 900 Wilco Bldg. Midland, Texas 79701	9. Well No. 1
4. Location of Well UNIT LETTER M 660 FEET FROM THE South LINE AND 660 FEET FROM THE West LINE, SECTION 20 TOWNSHIP 17-S RANGE 28-E NMPM.	10. Field and Pool, or Wildcat Empire (Penn)
15. Elevation (Show whether DF, RT, GR, etc.) 3563 GL	12. County Eddy

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data
NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input checked="" type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

5-28-86 Prepare to P&A. Packer @ 9733'.
5-29-86 Install BOP. TOH with 311 jts. 2-3/8" tubing & packer. Set CIBP @ 9850' w/35' cement on top.
5-30-86 Spot 25sx "H" plug @ 9550'. Casing free @ 6450'.
5-31-86 Spot 25sx "H" plug @ 7800'. Spot 25sx "H" plug @ 7000'. Cut casing @ 6450'.
6-02-86 LD 141 jts. 4-1/2" casing. Spot 35sx "H" plug @ 6500'.
6-03-86 Set 50sx "H" plug @ 5300'. Set 50sx "H" plug @ 2560'. Set 25sx "H" plug @ surface. Weld on dry hole marker. Well P&A'ed.

Post ID-2
6-13-86
P&A

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED Rhicia Henderson TITLE Engineering Assistant DATE 6-04-86

APPROVED BY Danell Moore TITLE Geologist DATE 6/30/86

CONDITIONS OF APPROVAL, IF ANY:

