


Operator St. Mary Land & Expl. Co.
 Well Tecumseh Federal #1
 Unit H Section 20 Township 16 Range 27
 API # 30-015-27935

TOPS

Bowers	495'
Queen	622'
Grayburg	1024'
San Andres	1324'
Glorieta	2712'
Tubb	4105'
Abo	4816'
Wolfcamp	6020'
Cisco	6992'
Canyon	7628'
Simola	8016'
Atoka	8423'
McNew	UNDEFINED
Chester	8778'

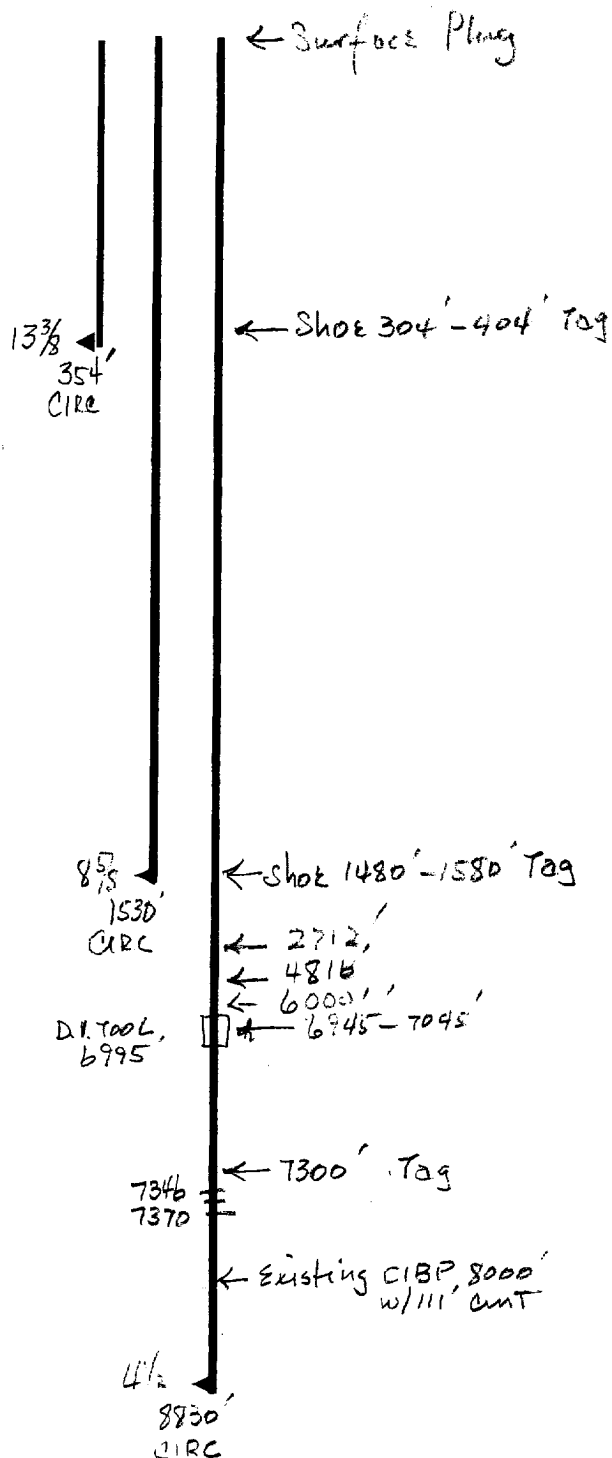

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of **all** casing string(s) in the correct footage or sacks required, if no **cement exists**.
- * Plugs to be tagged will be indicated.

10.