

Submit 3 Copies To Appropriate District Office  
District I  
525 N. French Dr., Hobbs, NM 88240  
District II  
11 South First, Artesia, NM 87210  
District III  
900 Rio Brazos Rd., Aztec, NM 87410  
District IV  
220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico  
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION  
1220 South St. Francis Dr.  
Santa Fe, NM 87505

CIS P  
BP

Form C-103  
Revised March 25, 1999

<b>SUNDRY NOTICES AND REPORTS ON WELLS</b> (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)		WELL API NO. <b>30-015-02926</b>
Type of Well: Oil Well <input checked="" type="checkbox"/> Gas Well <input type="checkbox"/> Other <input type="checkbox"/>		5. Indicate Type of Lease STATE <input checked="" type="checkbox"/> FEE <input type="checkbox"/>
Name of Operator <b>Marks and Garner Production Ltd., co.</b>		6. State Oil & Gas Lease No. <b>NM397624</b>
Address of Operator <b>POB 70 Lovington NM 88260</b>		7. Lease Name or Unit Agreement Name: <b>Cave Pool Unit</b>
Well Location Unit Letter <b>E</b> : <b>1650</b> feet from the <b>North</b> line and <b>330</b> feet from the <b>West</b> line Section <b>08</b> Township <b>17S</b> Range <b>29E</b> NMPM County <b>Eddy</b>		8. Well No. <b>41</b>
10. Elevation (Show whether DR, RKB, RT, GR, etc.) <b>3645' CR</b>		9. Pool name or Wildcat <b>Greyburg, Jackson, SA, Qn</b>

11. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☐  
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐  
PULL OR ALTER CASING ☐ MULTIPLE COMPLETION ☐  
OTHER: ☐


SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐  
COMMENCE DRILLING OPNS. ☐ PLUG AND ABANDONMENT ☐  
CASING TEST ☒  
**00000000**  
OTHER: ☐

2. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

Rig up and run in hole with CIBP. Set CIBP @ 2300'. Come out of hole. Rig up to test casing. Test casing to 500 psi and hold for 30 min. Well held for 30 min. Tested OK. Rig down.

Temporary Abandoned Status approved  
until **12-14-02**

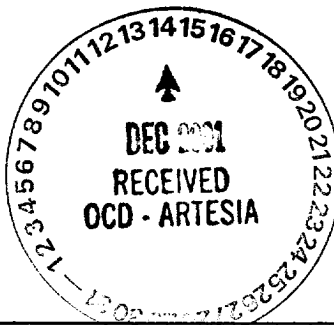

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE [Signature] TITLE Agent DATE 12-14-01

Type or print name \_\_\_\_\_ Telephone No. 505 396 5326  
(This space for State use)

APPROVED BY [Signature] TITLE Field Sup ID DATE 1-2-02  
Conditions of approval, if any:



