

30-015-04036

Copy 101.

Property - 2492

Pool - 50570

Oxford[®]

⊗ ESSELTE

MADE IN U.S.A.


NO. R753 1/3

• • • •

Operator Bennett-Gal Co.
Well Jackson 154
Unit D Section 1 Township 17 Range 30
API # 30-0 15-24236

TOPS

Yates 1900
T. Salt 750
B. Salt 1000
Glorieta _____
Bone Sp. _____
Abo _____
Wolfcamp _____
Morrow _____
Devonian _____
Fusselman _____
Other _____

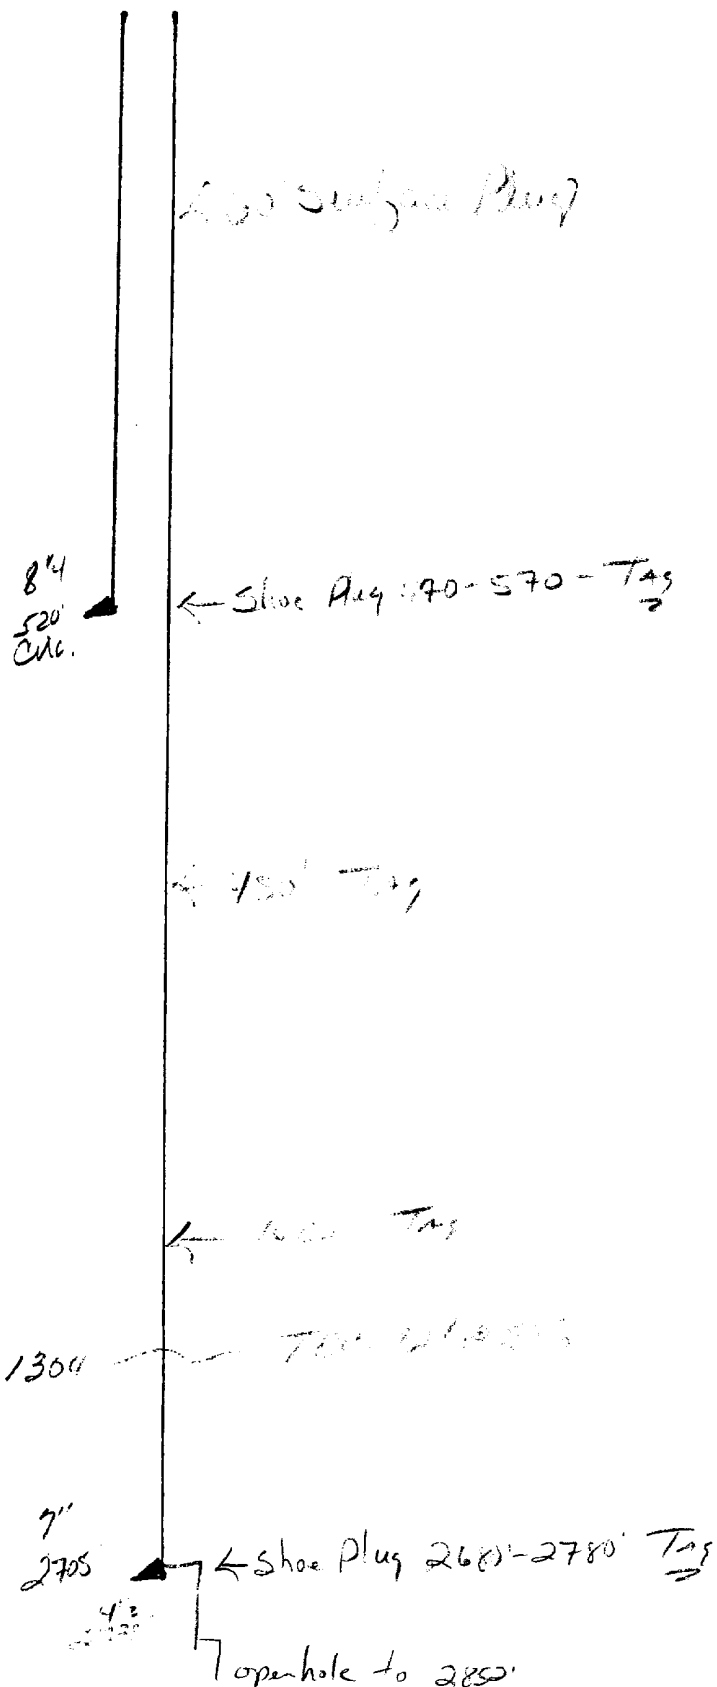

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.