


Operator Mack Energy Corp.
 Well Melrose Federal #1
 Unit E Section 23 Township 17 Range 3c
 API # 30-015-04297

TOPS

T Salt	440
B Salt	1150
Gates	1380
Trivers	1650
Bowers	2010
Green	2268
Granbury	-
San Andres	3073
Glen Rose	4510
Tubb	5175
Abc	6695
Abc Reef	6825

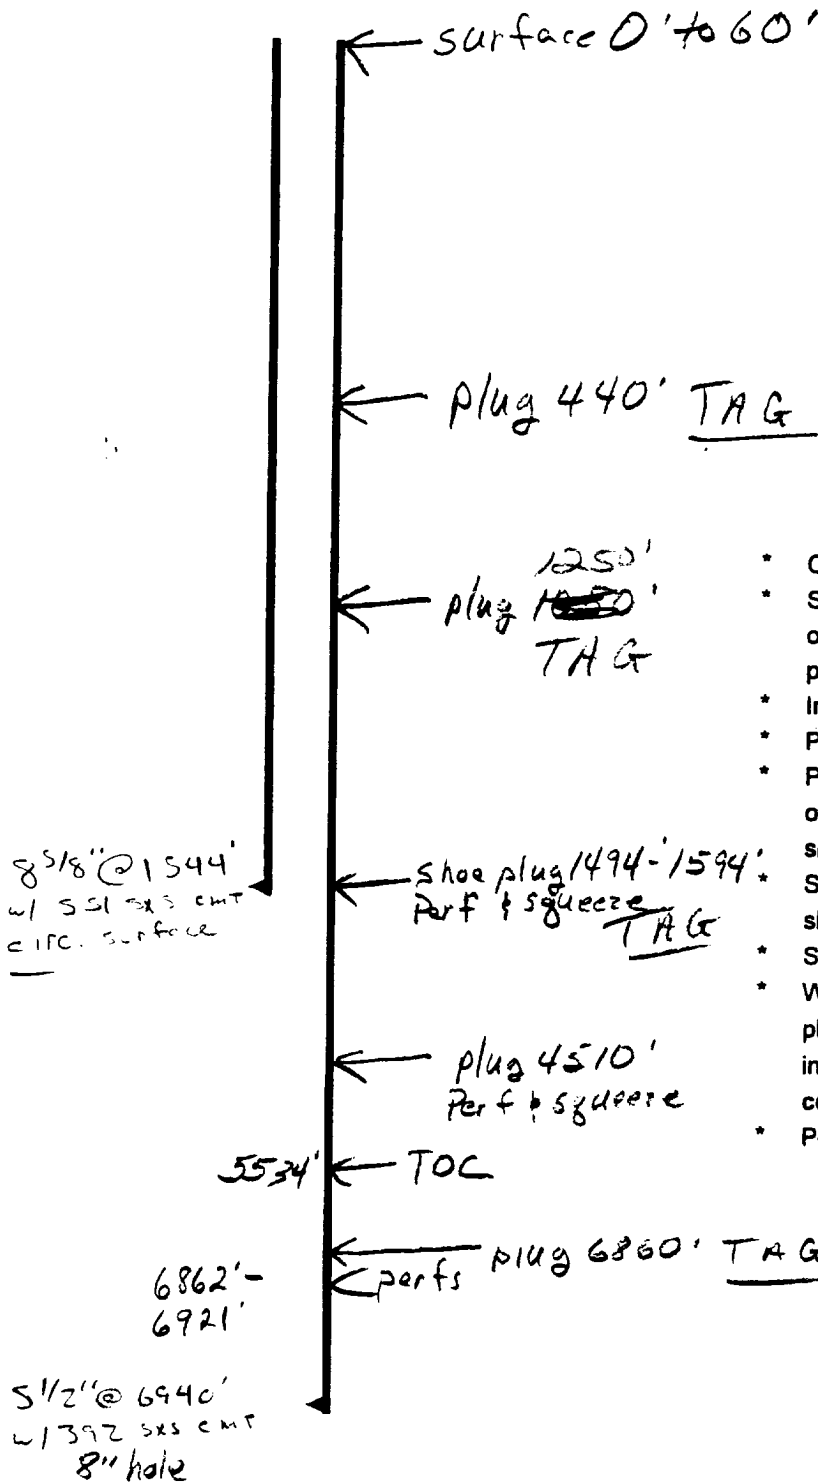

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

MCLB