


Operator Louis Dreyfus N.G.
 Well Dorothy 36 St. Com #1
 Unit N Section 36 Township 17 Range 28
 API # 30-015-28760

TOPS

Salado	550'
B Salt	650'
Yates	840'
Brewing	1500'
Queen	1809'
St Andrews	2668'
Colbert	4305'
Pine Springs	6172'
Wells Camp	7123'
Penn	8860'
Springs	9869'
Arkco	10118'
Morrow CI	10528'
Butt	10906'
Chatter	11026'

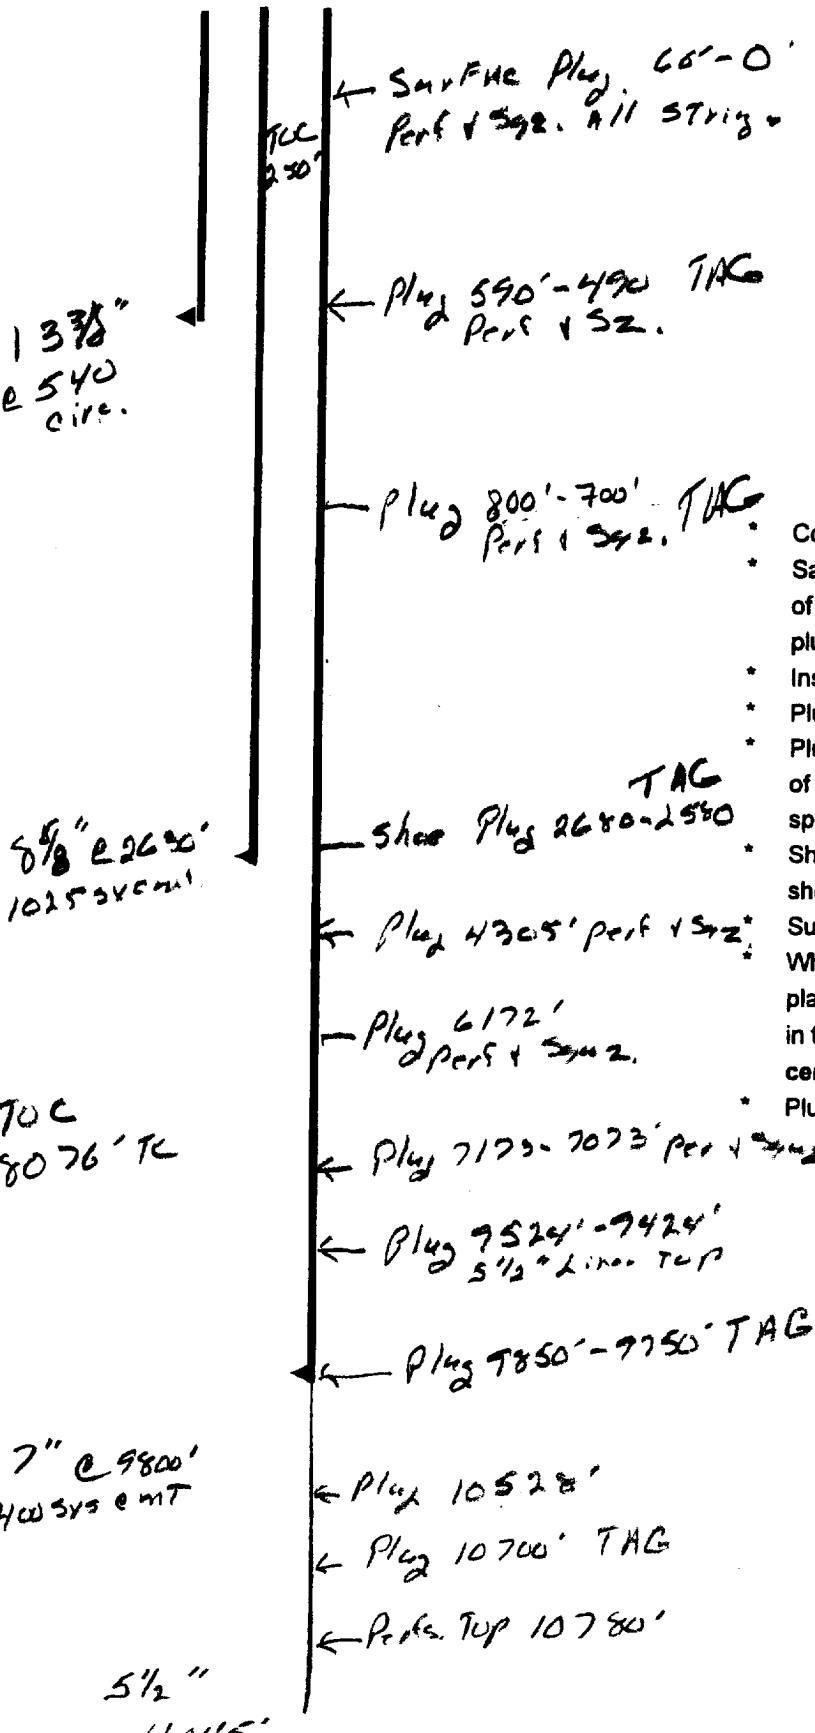

Contact OCD 24 hrs. prior to any work done.

Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.

Install dry hole marker as per Rule 202.B.2

Plugs are to be set from point indicated up.

Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.

Shoe and stub plugs will be 50' above and below shoe or stub and tagged.

Surface plug will be from 0' - 60'

Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.

Plugs to be tagged will be indicated.

RT