
BI OW OUT PREVENTER AND CHOKE MANIFOLD

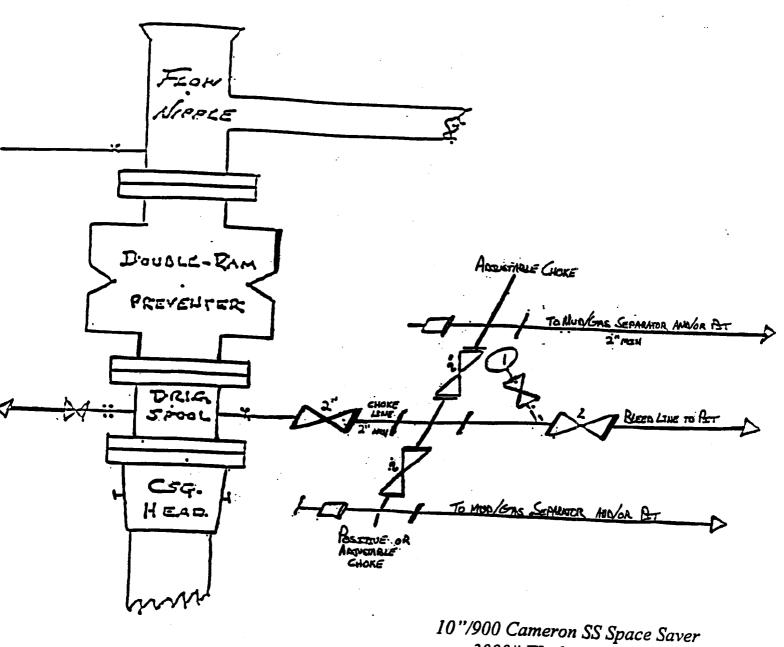

10"/900 Cameron SS Space Saver 3000# Working Pressure 3000# Working Pressure Choke Manifold

Tony Federal # 5 1090' FSL & 2366' FEL Section 18; T17s -- R31e Eddy County, New Mexico

Exhibit # 1

Attachment to Exhibit #1 NOTES REGARDING THE BLOWOUT PREVENTERS

- I. Drilling nipple to be so constructed that it can be removed without use of a welder through rotary table opening, with minimum I.D. equal to preventer bore.
- 2. Wear ring to be properly installed in head.
- 3. Blow out preventer and all fittings must be in good condition, 1000 psi W.P. minimum.
- 4. All fittings to be flanged.
- 5. Safety valve must be available on rig floor at all times with proper connections, valve to be full bore 1000 psi W.P. minimum.
- 6. All choke and fill lines to be securely anchored, especially ends of choke lines.
- 7. Equipment through which bit must pass shall be at least as large as the diameter of the casing being drilled through.
- 8. Kelly cock on kelly.
- 9. Extension wrenches and hand wheels to be properly installed.
- 10. Blow out preventer control to be located as close to driller's position as feasible.
- II. Blow out preventer closing equipment to include minimum 40 gallon accumulator, two independent sources of pump power on each closing unit installation, and meet all API specifications.