

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use "APPLICATION FOR PERMIT—" for such proposals.)

LC-055374 *CSF*

6. INDIAN, ALLOTTEE OR TRIBE NAME

1. OIL WELL GAS WELL OTHER *WIW - TA*

2. NAME OF OPERATOR
NEWMONT OIL COMPANY ✓

3. ADDRESS OF OPERATOR
P. O. BOX 1305, ARTESIA, NEW MEXICO

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.)
At surface

660' FSL & 1980' FEL of Sec. 12-18-29

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)
3522'

7. UNIT AGREEMENT NAME
W.L.H.U. GRB #4 SD UT

8. FARM OR LEASE NAME
Tract 6

9. WELL NO.
3

10. FIELD AND POOL, OR WILDCAT
Loco Hills (O.G.SA)

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA
Sec. 12-18-29 NMPM

12. COUNTY OR PARISH
Eddy

13. STATE
New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF
FRACTURE TREAT
SHOOT OR ACIDIZE
REPAIR WELL
(Other)

PULL OR ALTER CASING
MULTIPLE COMPLETE
ABANDON*
CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF
FRACTURE TREATMENT
SHOOTING OR ACIDIZING
(Other)

REPAIRING WELL
ALTERING CASING
ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

The above well was plugged and abandon as follows:


12/15/82...Well flowing back.

12/16/82...Set 7" cast iron bridge plug at 2520'. Spotted 25 sacks on plug. Mudded hole up, perf base of salt at 1045' and squeezed w/150 sacks cement. WOC.

12/17/82...Tagged plug at 953', pressured up on csg to 800'psi. Okay. Perf top of salt @ 355'. Csg parted at shot, pumped 120 sacks cement on back side. WOC.

12/18/82...Tagged plug at 40'. Set 15 sack cement plug and dry hole marker at surface.

Location ready for inspection.

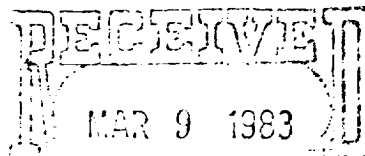

18. I hereby certify that the foregoing is true and correct

SIGNED *[Signature]*
(This space for Federal or State office use)

TITLE *Area Manager*

DATE *3/8/83*
U.S. GEOLOGICAL SURVEY
ROSWELL, NEW MEXICO

APPROVED BY _____
CONDITIONS OF APPROVAL, IF ANY:

TITLE _____ DATE _____

*See Instructions on Reverse Side

*Post ID-2
4-1-83
P+H*