


Operator United Oil & Minerals, Inc.
 Well N. Benson Queen UT. #14
 Unit 6 Section 28 Township 18 Range 30
 API # 30-015-10131

TOPS

Salade	405'
B Salt	1270'
Yates	1453'
Queen	2619'

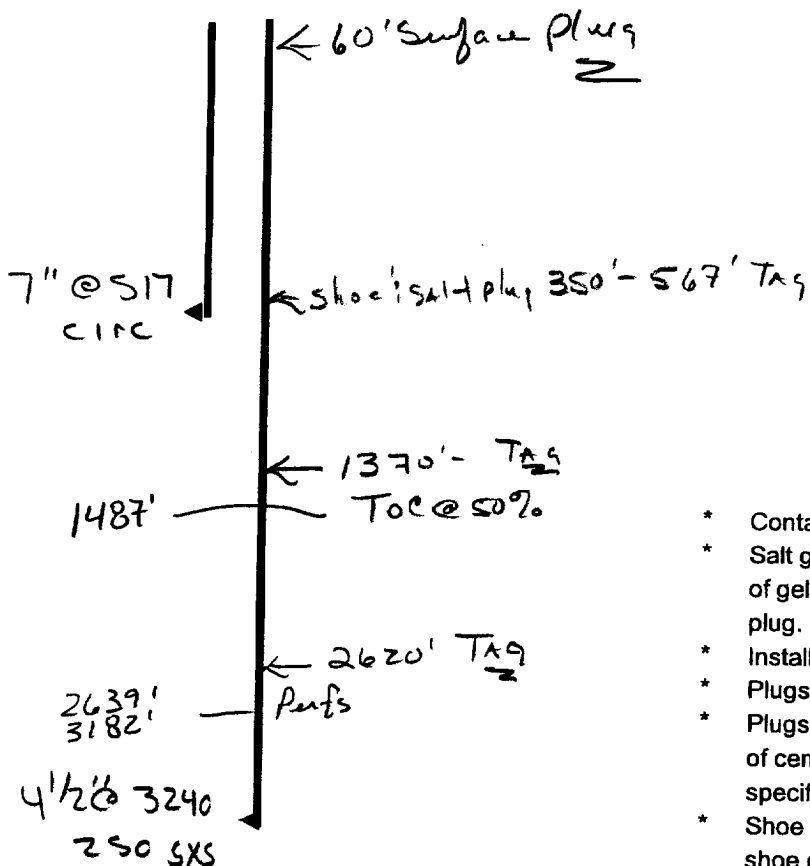

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of **all** casing string(s) in the correct footage or sacks required, **if no cement exists.**
- * Plugs to be tagged will be indicated.