


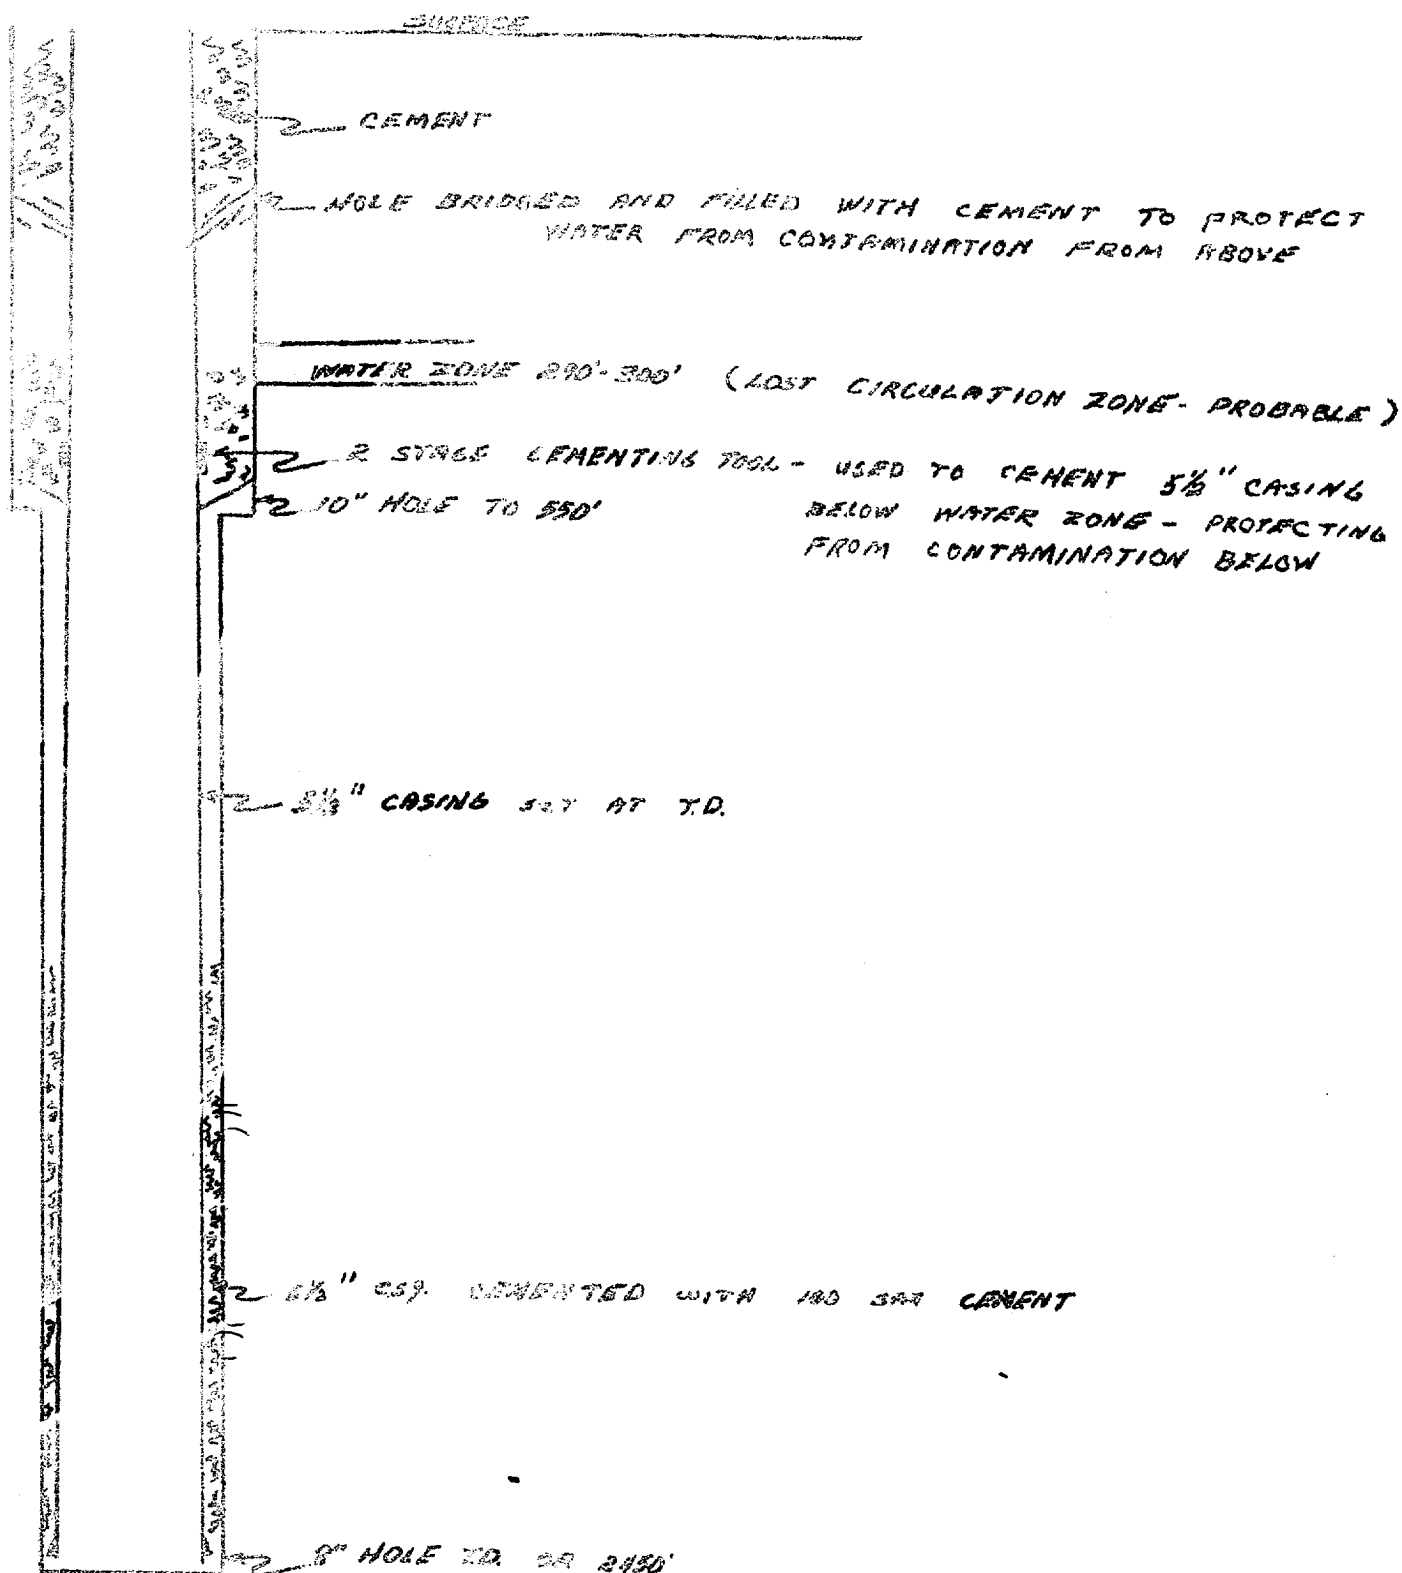

- Step 1. Run 5 1/2" casing to total depth placing a 2 stage cementing tool in the string about 400 to 450 feet from the top.
- Step 2. Remove the 8 5/8" casing which was set but not cemented.
- Step 3. Try to circulate water, then pump 100 sacks cement behind the 5 1/2" casing.
- Step 4. Open ports on 2 stage cementing tool and cement upper part of 5 1/2" casing with 75 sacks cement.
- Step 5. Drive plug down hole outside of 5 1/2" casing and fill to surface with cement.