


Operator Quality Production Corp.
 Well Maljamar 'A' State #1
 Unit B Section 36 Township 17 Range 31
 API # 30-015-10400

TOPS

Rustler	796'
Salado	996'
Base Salt	2005'
Gates	2175'
Travis	2590'
Alvarado	3192'
Grayburg	3683'
San Andres	3852'

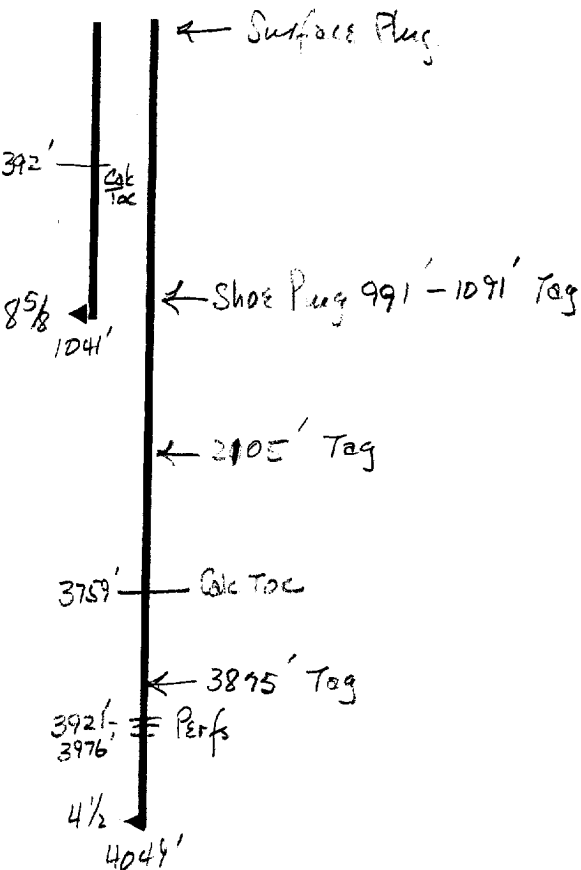

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

[Handwritten signature]