

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN T
(Other instruc-
verse side)

ICATE*

Form approved.
Budget Bureau No. 42-R1424.
5. LEASE DESIGNATION AND SERIAL NO.

New Mexico - 0925

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Dry Hole	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR John H. Trigg	8. FARM OR LEASE NAME Federal Sivley Wright
3. ADDRESS OF OPERATOR P. O. Box 106 - Maljamar, New Mexico	9. WELL NO. 2-29
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.) At surface 660 Feet from North Line and 1980 Feet from East Line	10. FIELD AND POOL, OR WILDCAT Undesignated Loco Hills
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 3529.3 KIM
	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA S.29., T18S., R29E.
	12. COUNTY OR PARISH Hddy 13. STATE N. Mex.

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐FRACTURE TREAT ☐SHOOT OR ACIDIZE ☐REPAIR WELL ☐(Other) ☐PULL OR ALTER CASING ☐MULTIPLE COMPLETE ☐ABANDON* ☐CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐FRACTURE TREATMENT ☐SHOOTING OR ACIDIZING ☐(Other) ☐REPAIRING WELL ☐ALTERING CASING ☐ABANDONMENT* ☒

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

This dry hole was plugged and abandoned on March 1, 1965 in the following prescribed manner;

1. Set 35 sack cement plug from 8581 to 8681.
2. Set 35 sack cement plug from 6524 to 6624.
3. Set 35 sack cement plug from 4981 to 5081.
4. Set 35 sack cement plug from 2803 to 2903.
5. Set 35 sack cement plug from 1936 to 2036.
6. Set 35 sack cement plug from 919 to 1019.
7. Set 10 sack cement plug from surface to 25'.
8. All voids are filled with good mud.
9. Erected regulation marker pipe.

Location will be cleaned up and ready for inspection by March 26, 1965.

RECEIVED

AUG 9 1965

O. C. C.
ARTESIA, OFFICE

18. I hereby certify that the foregoing is true and correct


SIGNED Kenneth E. Aston
Kenneth E. AstonTITLE Production ClerkDATE March 11, 1965

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

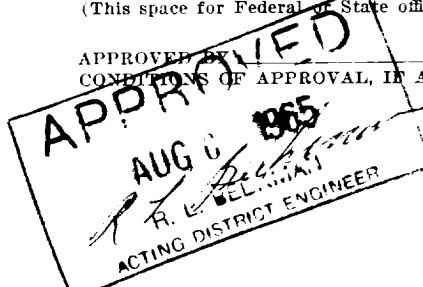

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.