


Operator Paul Terry TNL GRS Com #2
 Well Paul Terry
 Unit H Section 15 Township 18S Range 26E
 API # 30-005-10860

Notes
 A. Salt
 B. Salt
 Glorieta
 Bone Sp.
 Abo 4454'
 Wolfcamp 5900'
 Morrow 8809'
 Devonian
 Fusselman
 Other

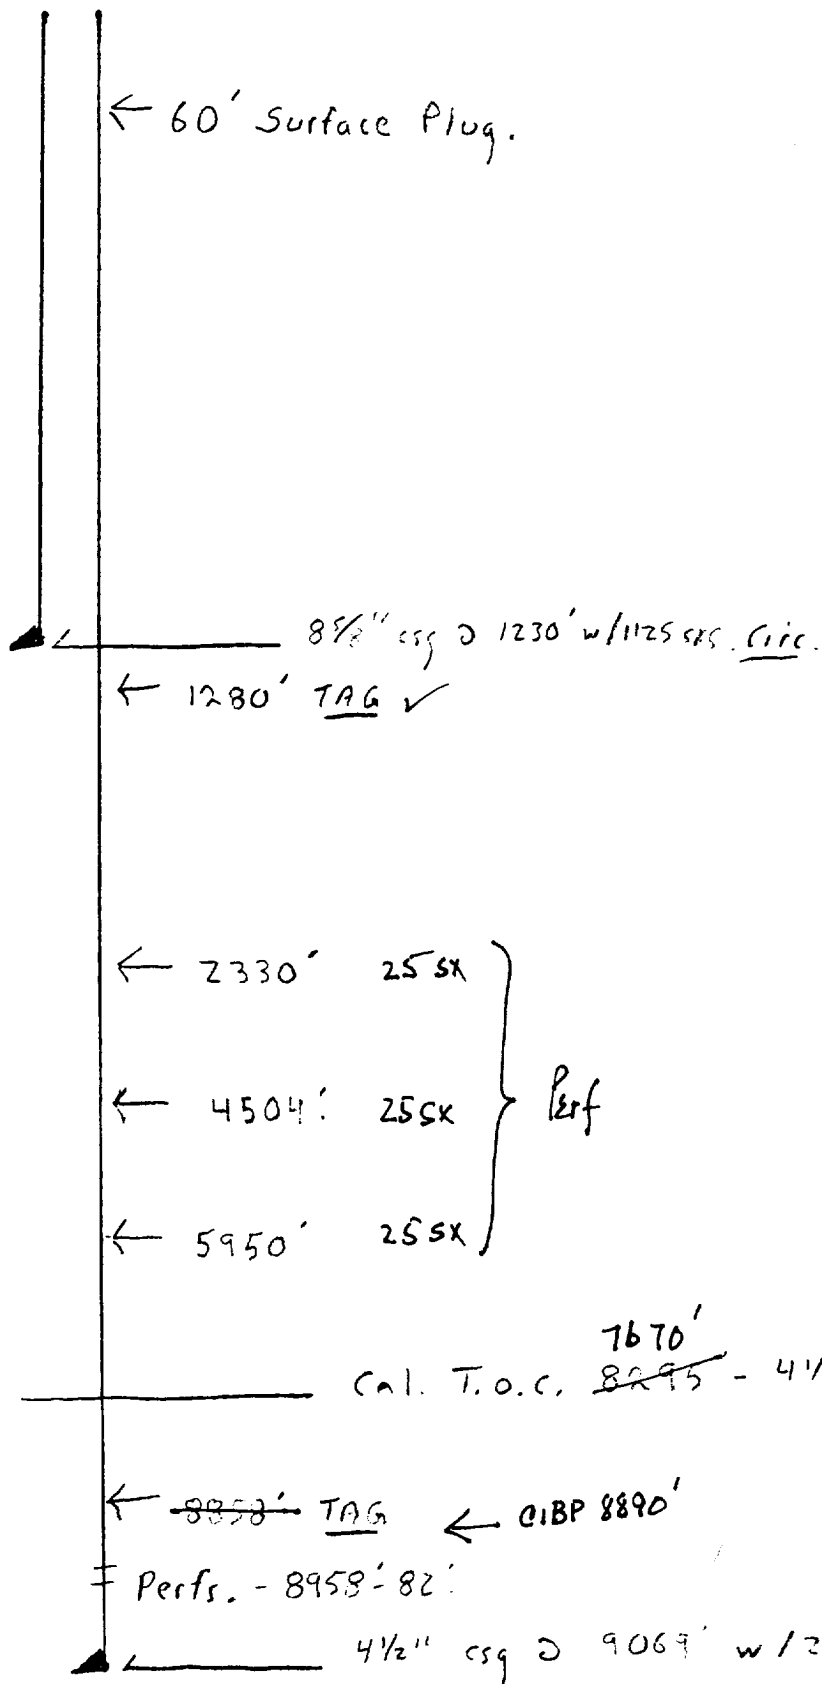

- Contact OCD 24 hrs. prior to any work done
- Salt gel mud consisting of 10# brine with 25 of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

NEP POINT 8890' - 8745'
 Perf @ 8262 - 8269
 8470 - 8484
 TAG. CIBP @ 8200' w/35'

Next Well
 ↑
 Approved plug procedure
 2/27/02 / 6/8/02