


Operator Sandlett Energy
 Well Rosier Yates #380
 Unit H Section 32 Township 18 Range 28
 API # 30-015-20215

TOPS

Salado	~300'	*
Base Salt	~542'	#
Gates	626'	*
Queen	1583'	
Grayburg	1945'	
San Andres	2320'	

Plug 60'-0" Surface

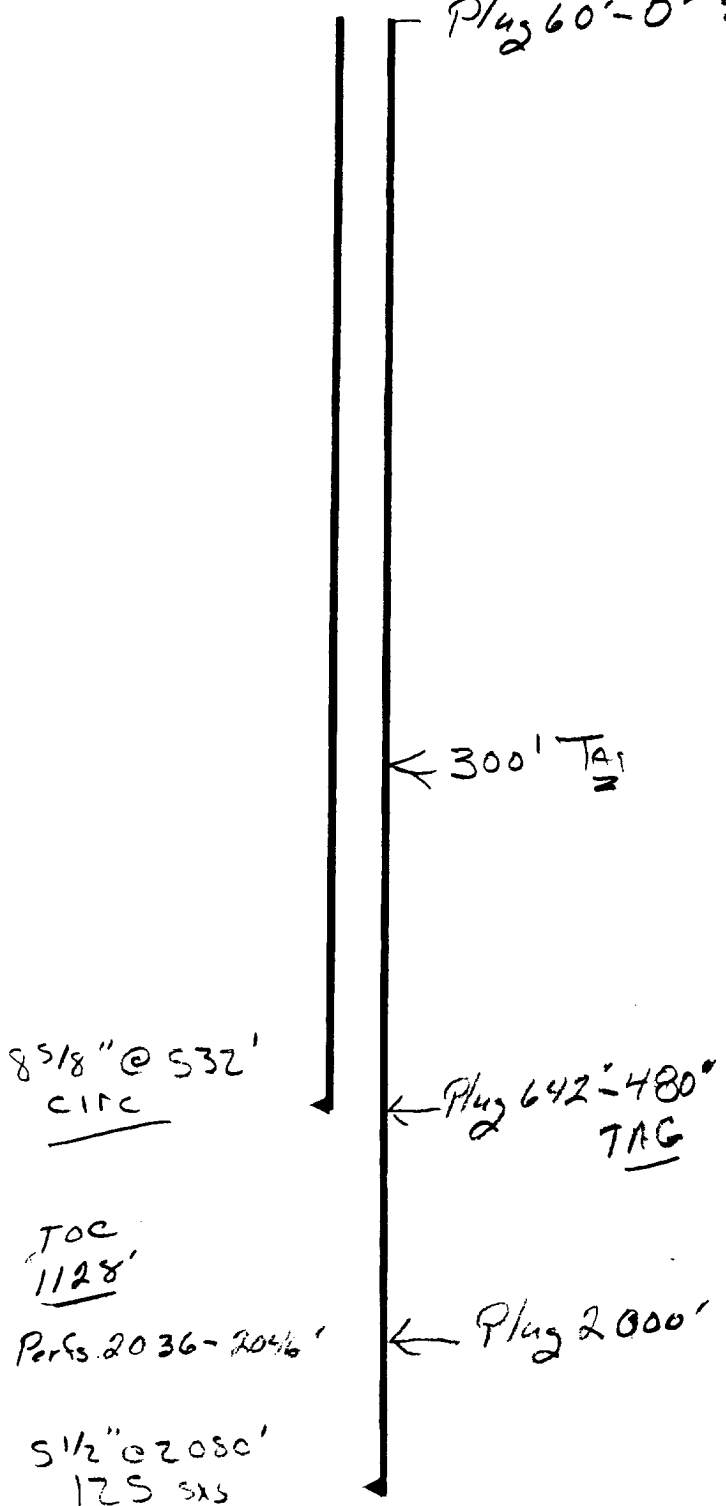

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.