


Operator Mitchell Energy Co.
 Well Roche Federal #2
 Unit 5 Section 7 Township 18 Range 31
 API # 30-015-23537

TOPS

Rustler	463
Salado	752
B Salt	1620
Waters	1832
Trivers ?	2010
Bowers	2752
Queen	3009
Grayburg	3510
S. Andres	4418
Bone Spring	5454
Wolfcamp	9154
Penn	10070
Strawn	10488
G. Tolch	10875
Menard Limestone	11285
Clastics	11358
Choster	11895
MIS S	11970

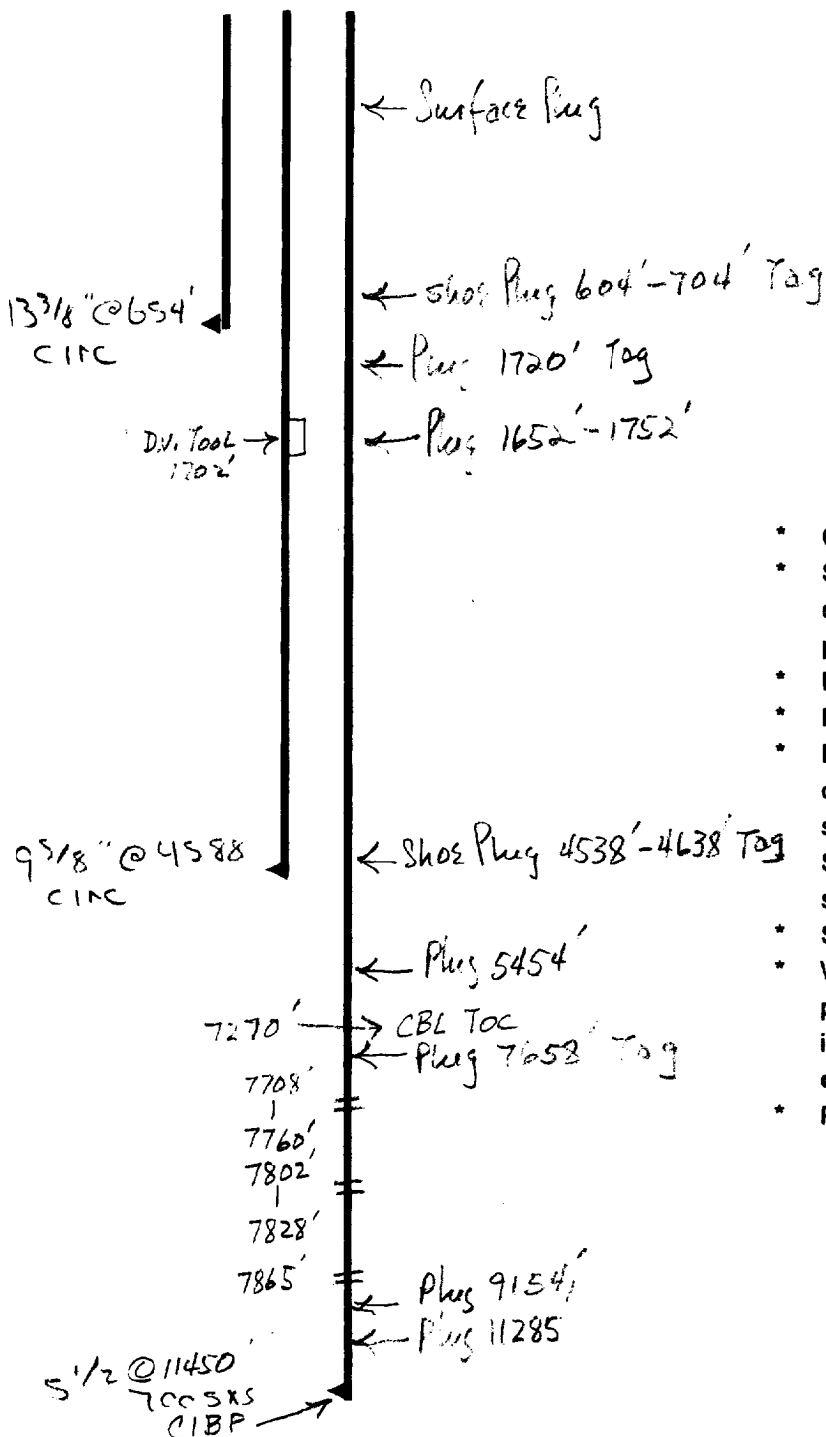

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

10.