

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

RECEIVED

MAR - 5 1992

O. C. D.

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

Premier Production Company

3. Address and Telephone No.

P.O. Box 1246, Artesia, NM 88210, (505) 748-2093

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

Section 23 SW/4 SW/4
T-18S R-29E

5. Lease Designation and Serial No.

NMM17223

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

Alice Federal #1

9. API Well No.

300152437400S1

10. Field and Pool, or Exploratory Area

Turkey Track, SR,Q,GB,SA

11. County or Parish, State

Eddy, NM

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION


- ☒ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☒ Other Plug

- ☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

We propose to plug this well in the following manner: (The 4½" casing is circulated & will be left in tact.) Rig up pulling unit to pull rods & pump. Go back in hole; set cast iron bridge plug at 2900'. Tag up w/tubing & pump 500' (50sax) cement plug from 2900' to 2400'. Tag up & pump 500' cement plug from 2400' to 2000'. Tag up & pump 500' cement plug from 1900' to 1400'. Tag up & pump 500' cement plug (50sax) from 1400' to 1000'. Pump 250' plug from 1000' to 750' to isolate salt bottom. Pump 200' cement plug from 500' to 300' to isolate top of salt. Pump 50' surface plug. Cut off head & install 4"x4" dry-hole marker. Back fill pits & cleanup location.

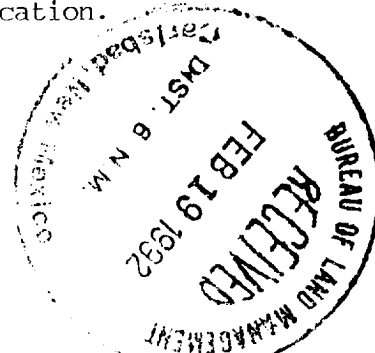

14. I hereby certify that the foregoing is true and correct

Signed [Signature]

Title owner/operator

Date 4/10/92

(This space for Federal or State/Office use)

Approved by [Signature]

Title PETROLEUM ENGINEER

Date 3/2/92

Conditions of approval, if any: