


Wares over  
 Sandwin C.I.M #2  
 G17-18-26

13 3/8 510°

9 5/8 1300°

|                 |                  |         |
|-----------------|------------------|---------|
| DV Tool         | 6501             | 25 af   |
| 2 po 5H 921     |                  | 25 af   |
| 2 lb 2238       |                  | 25 af   |
| 1 lb 4380       |                  | 25 af * |
| half C. 5600    | -                | 25 af   |
| upper Perm 6965 | set CIBP + cap * |         |
| stream 8805     |                  | 25 af   |
| etaka 8480      |                  | 25 af   |
| Narrow 8690     | is covered       | *       |

Run free point on CIBL  
 to find TOC. Cut & pull  
 pipe. 100' plug is to be  
 placed across cog stick &  
 tag. Place 100' plug  
 across 9 5/8 shoe & tag  
 100' plug across 13 3/8 shoe  
 10' surface plug to  
 DHM. Place mud between  
 plugs

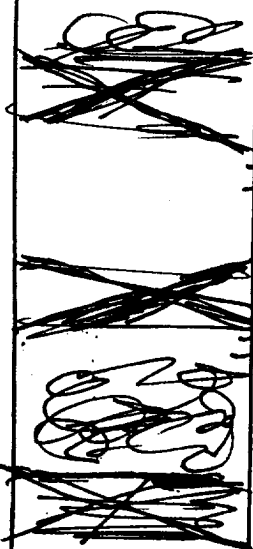

CIBP over all of the Perm  
 e 6965 + cap

Cisco Refs e 6974

RCIBP e 7720 will remove  
 Refs 7720-7613

Narrow e 8690 + covered

BP is set e 8850

5 1/2 e 9090

