

Wellbore Data

Loco Hills Welch #5
Unit L - Sec 4 - T 18S - R 29E
1450' FSL & 660' FWL
API # 30-015-31232

PBTD: 7,980'


TD: 11,200'

PERFS: 6358' - 6446'

PBTD DATE: 06/27/2001

TD DATE: 10/08/2000

COMPLETED: 12/12/2000

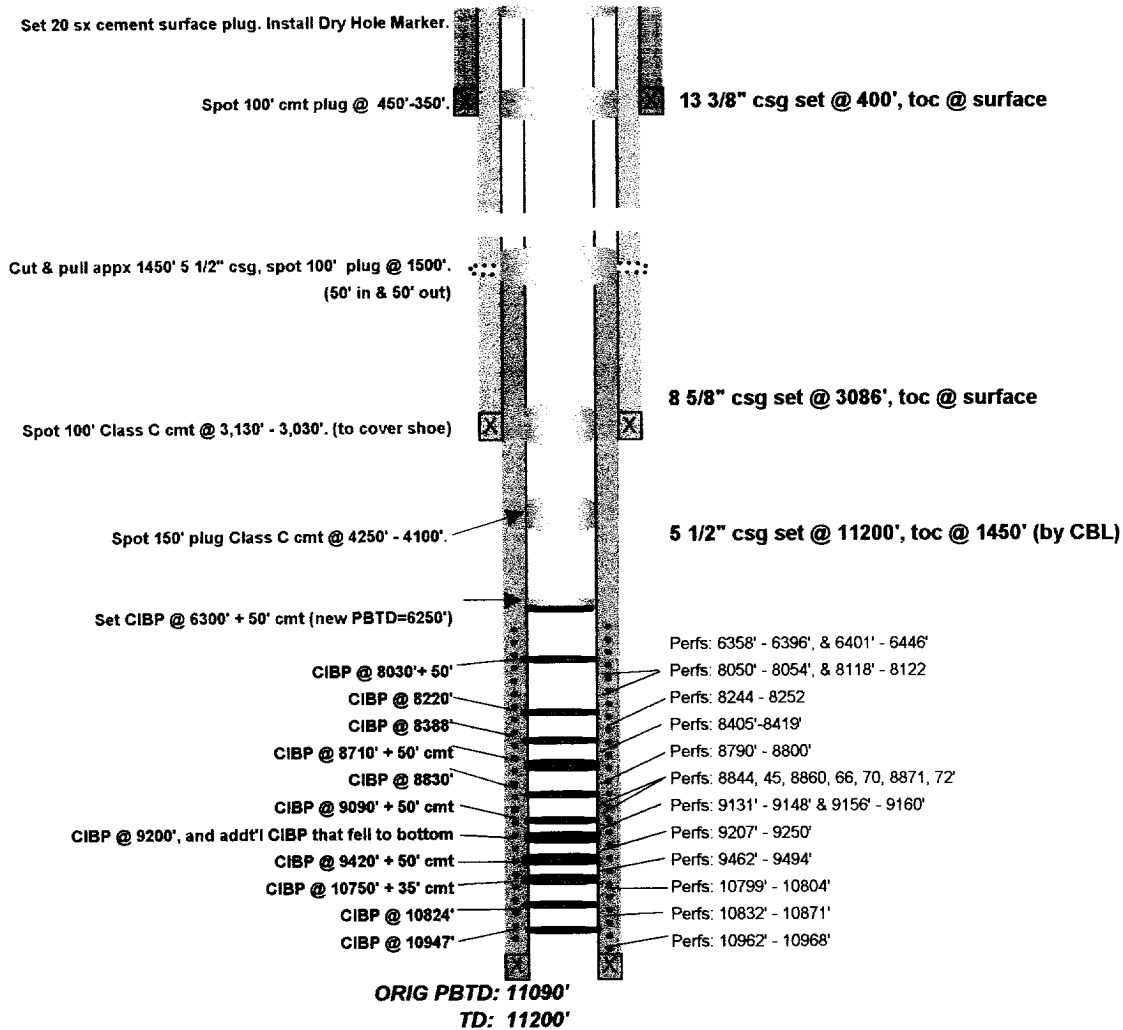

DRAWING NOT TO SCALE

PLUGGING PROCEDURE:

1. Set CIBP @ 6300' + 50' Cement.
2. Circulate 9 # Mud.
3. Spot 150' plug Class C cmt @ 4250'-4100'.
4. Spot 100' Class C cmt @ 3,130' - 3,030'.
5. Cut & pull appx 1450' 5 1/2" csg, spot 100' plug @ 1500'. Tag plug.
6. Spot 100' cmt plug @ 450'-350'.
7. Set 20 sx cement surface plug. Install dry hole marker.