


TOPS

Salade	2	300
Boer Sal	2	450
Wiers	2	600
Wiers	2	1150

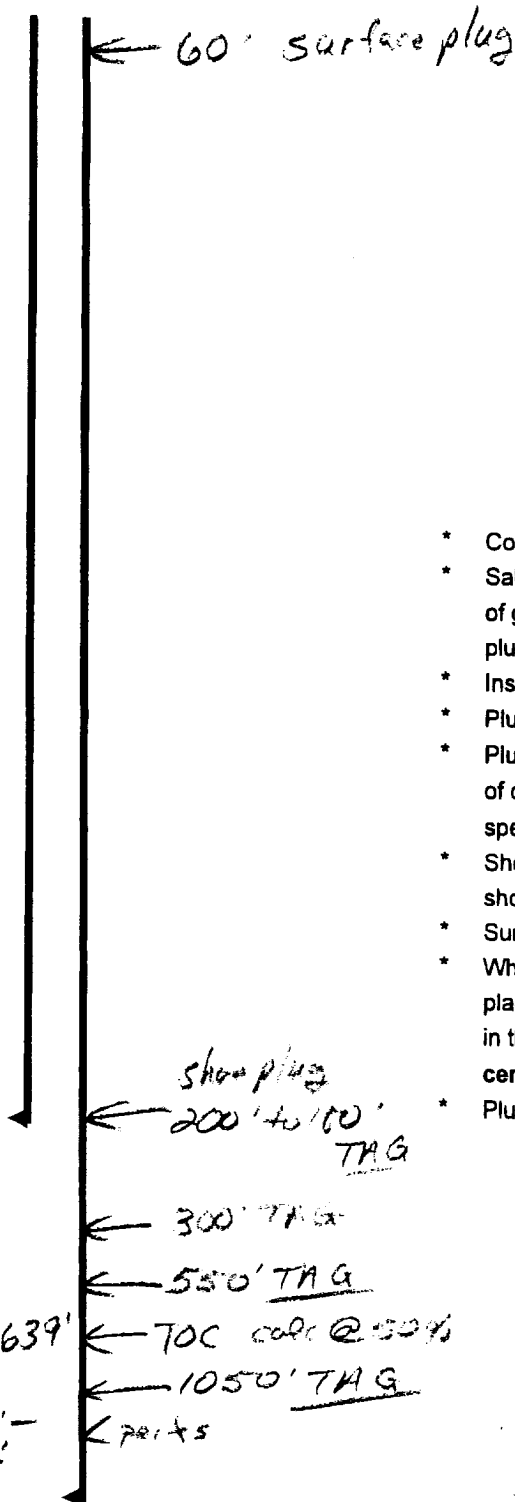

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of **all** casing string(s) in the correct footage or sacks required, **if no cement exists.**
- * Plugs to be tagged will be indicated.

CIRC
7" @ 206'
SC PAS
EST 8 1/2' ade

4 1/2" @ 1190
100 lbs
Est 6/6/2014

MLA