


Operator Glen Almons  
Well Jed 13 - #  
Unit F Section 13 Township 19  
API # 30-015 -- 04599

R-111-P-AREA

TOPS

I. Salt 630  
B. Salt 1780  
Yates 2100  
Glorieta \_\_\_\_\_  
Delaware \_\_\_\_\_  
Bone Sp. \_\_\_\_\_  
Abo \_\_\_\_\_  
Wolfcamp \_\_\_\_\_  
Morrow \_\_\_\_\_  
Devonian \_\_\_\_\_  
Fusselman \_\_\_\_\_  
Other \_\_\_\_\_

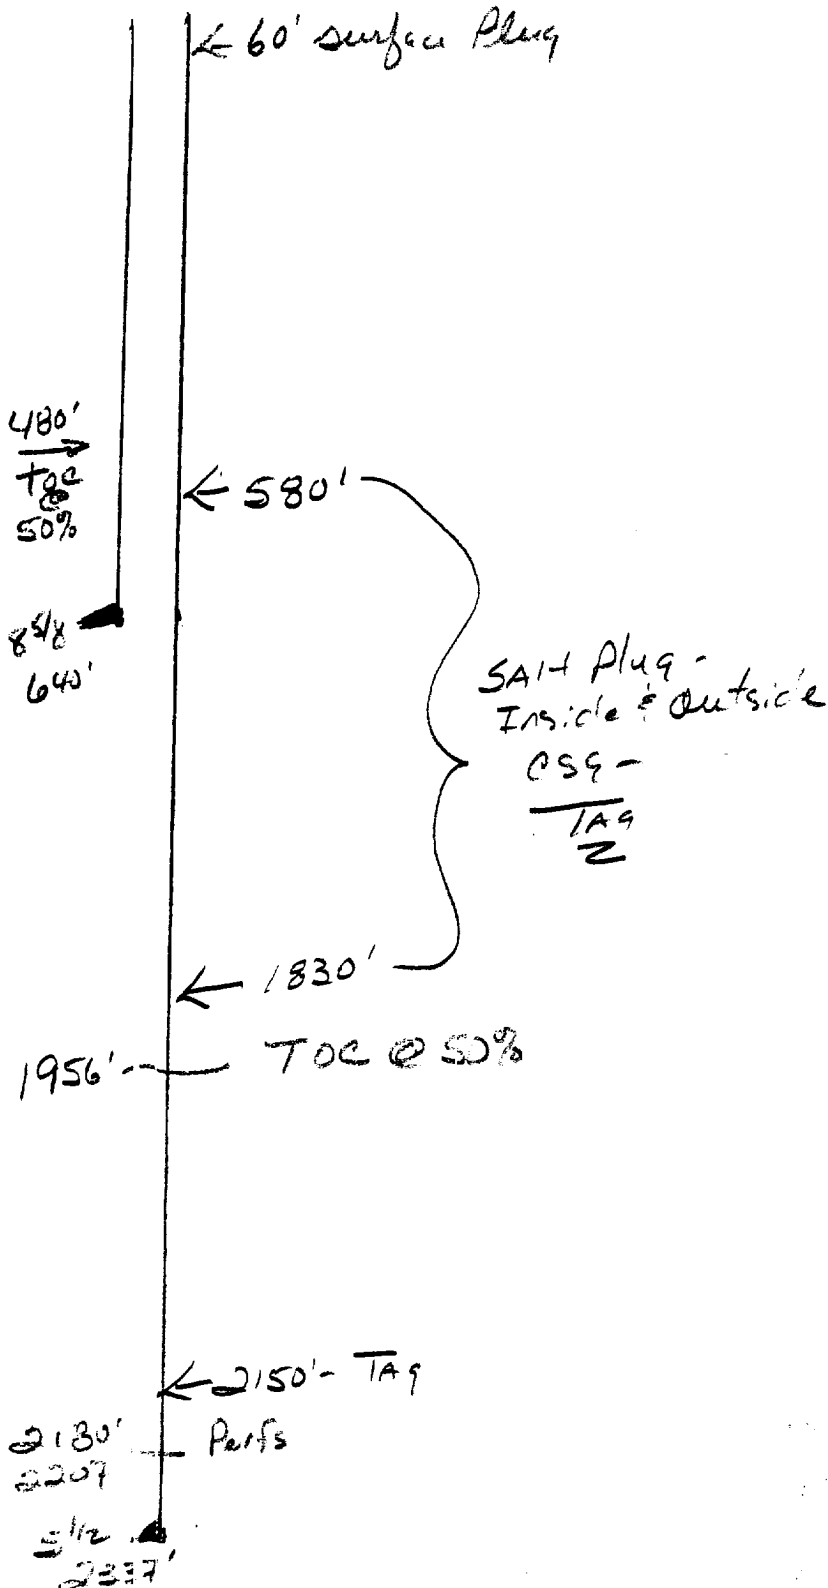

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.