


Operator Nadel & Cussman
 Well Hinkle 'B' #4
 Unit K Section 26 Township 18 Range 31
 API # 30-015-05611

TOPS

Rustler ~ 650
Salado ~ 900
B. Hill ~ 2075
Waters ~ 2250
Primers ~ 2750
Bowers ~ 3150
Green ~ 3400
Grayburg ~ N.P.E?

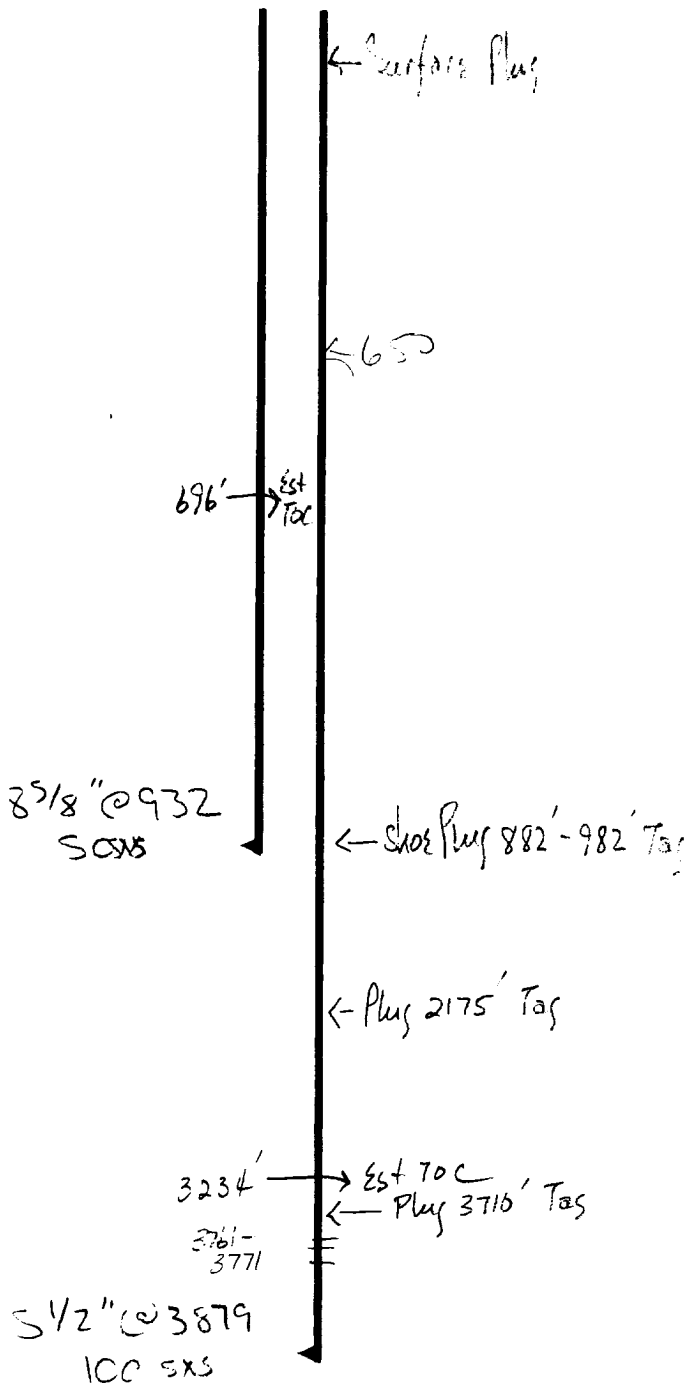

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

10.