


Operator I.T. Properties
 Well DHY St B #1
 Unit Section 11 Township 19 Range 28
 API # 30-015-21971

TOPS

- Yates 1058
- Rivers 1230
- Queen 1690
- Gramburg 2010
- San Andres 2500
- Bone Sprgs 4303
- Wolfcamp 8750
- Permian 9540
- Canyon 9773
- Shinarump 9910
- G. 10275
- Norian 10710
- Morrison 10825

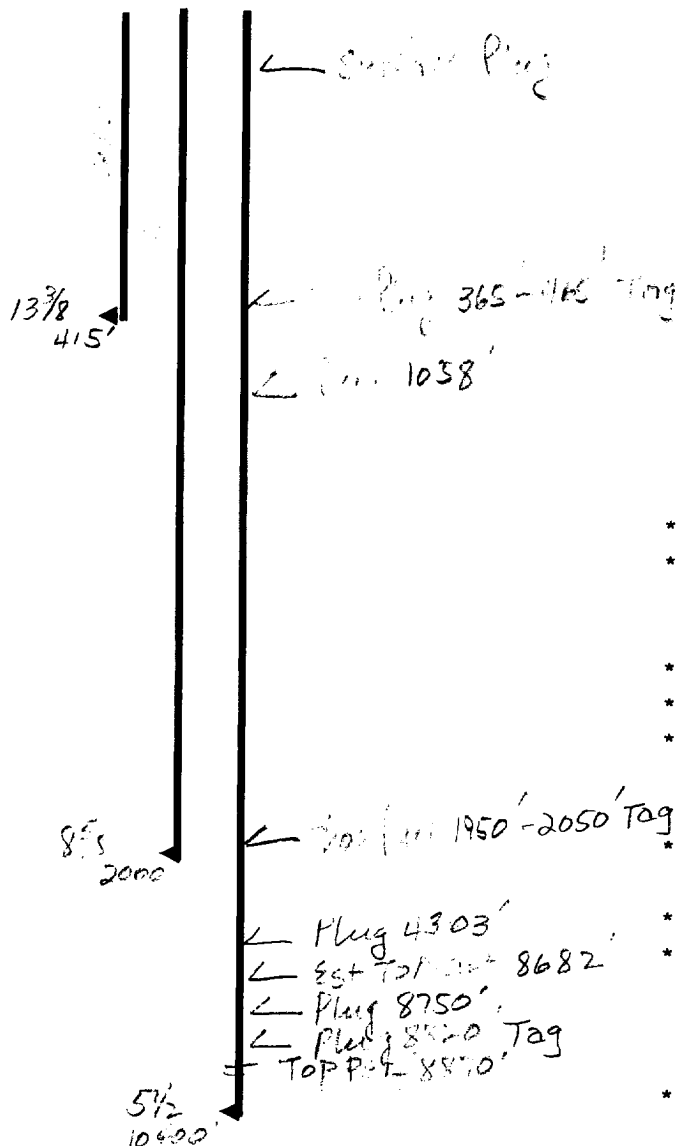

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

10.