


Operator St. Mary Land & Pipe Co.
 Well E. Shlageri Dolores Unit #1
 Unit 2 Section 13 Township 18 Range 31
 API # 30-015-25741

TOPS

Rustler	264'
Shinarump	870' *
B. J. 1st	2390' *
Gates	2445' *
Triassic	2840'
Flowers	3528'
Clarks	4120'
Gauleburg	4545'
St. Andrew	4781'

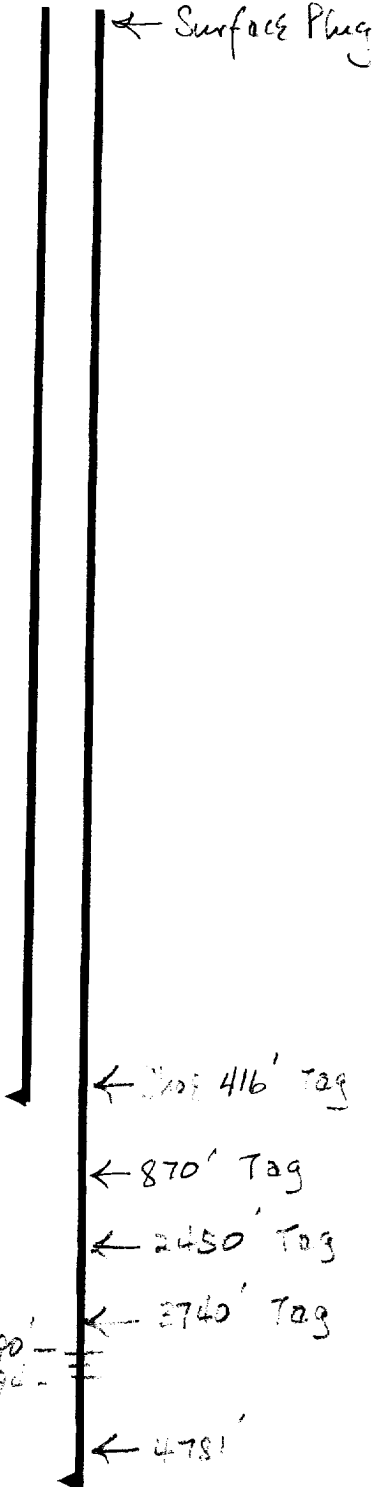

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

[Handwritten signature]