


Operator Brothers P-1 Co.
 Well Tamano (BSSC) UT # 805
 Unit A Section 11 Township 18 Range 31
 API # 30-015-26166

TOPS

Yates 2305
 T. Salt 1100
 B. Salt 2030
 Glorieta _____
 Bone Sp. 5714
 Abo _____
 Wolfcamp _____
 Morrow _____
 Devonian _____
 Fusselman _____
 Other Delaware 4840'

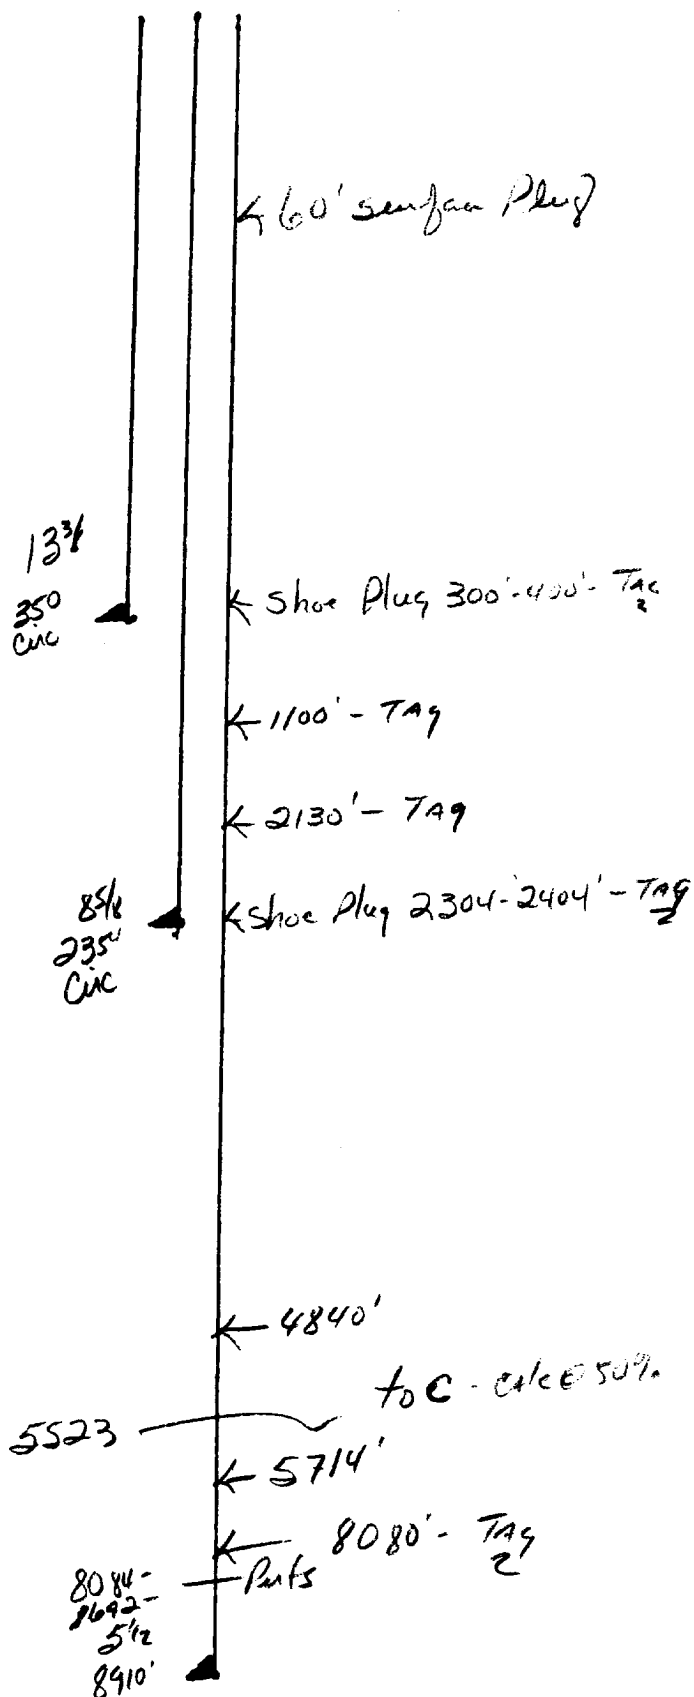

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.