


Operator Melrose Oper. Co.
 Well Ceneco State # 15
 Unit M Section 7 Township 14 Range 29
 API # 30-015-29197

TOPS

| | |
|----------|------|
| Salado | 397 |
| B Salt | 510 |
| Gatos | 842 |
| T Rivers | 1162 |
| Queen | 1750 |
| Grayburg | 2102 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

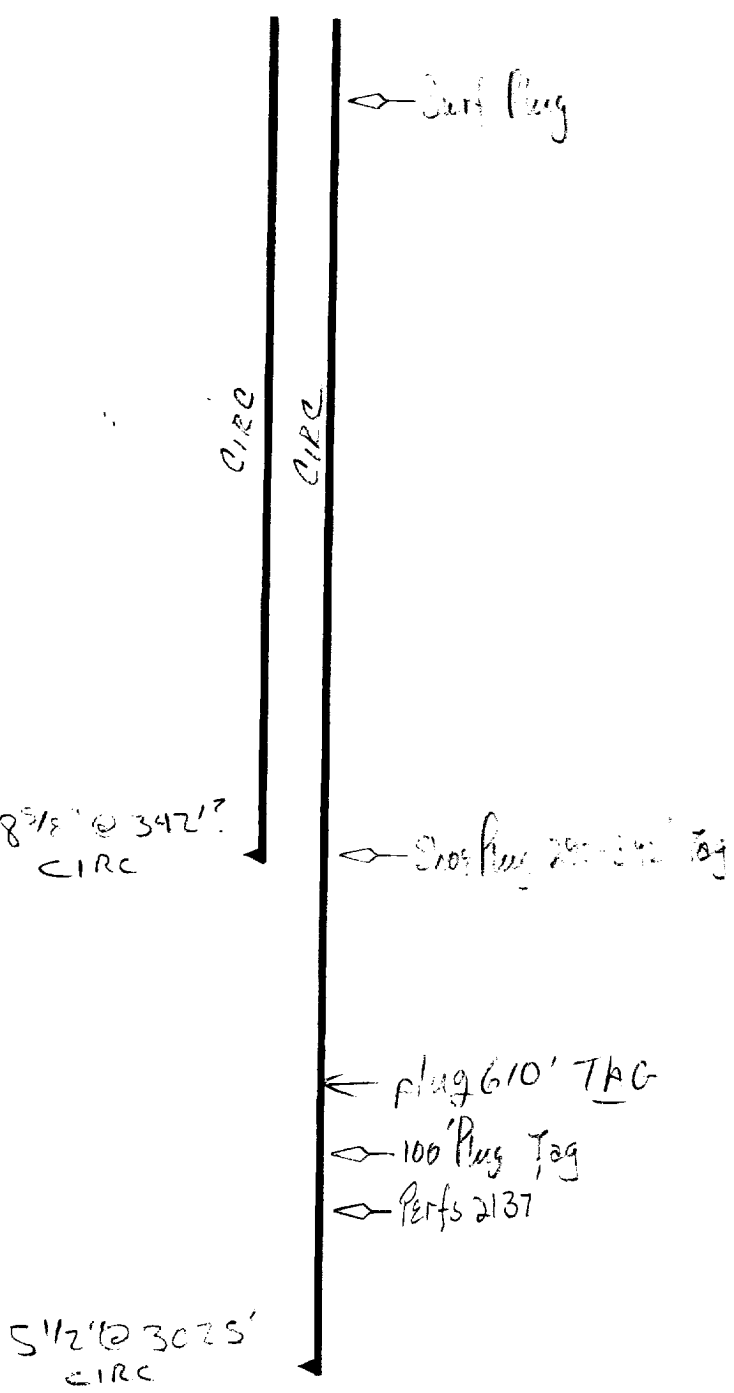

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

1/0