


Operator Ready Oil & Gas Mngt.
 Well Willis Federal #40
 Unit H Section B Township 20 Range 28
 API # 30-015-10422

TOPS

Selado 920'
B Salt 620'
Gases 2750'

- * Contact OCD 24 hrs. prior to any work done.
 - * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
 - * Install dry hole marker as per Rule 202.B.2
 - * Plugs are to be set from point indicated up.
 - * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
 - * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
 - * Surface plug will be from 0' - 60'
 - * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

7" @ 145
 12 SXS
CIRC

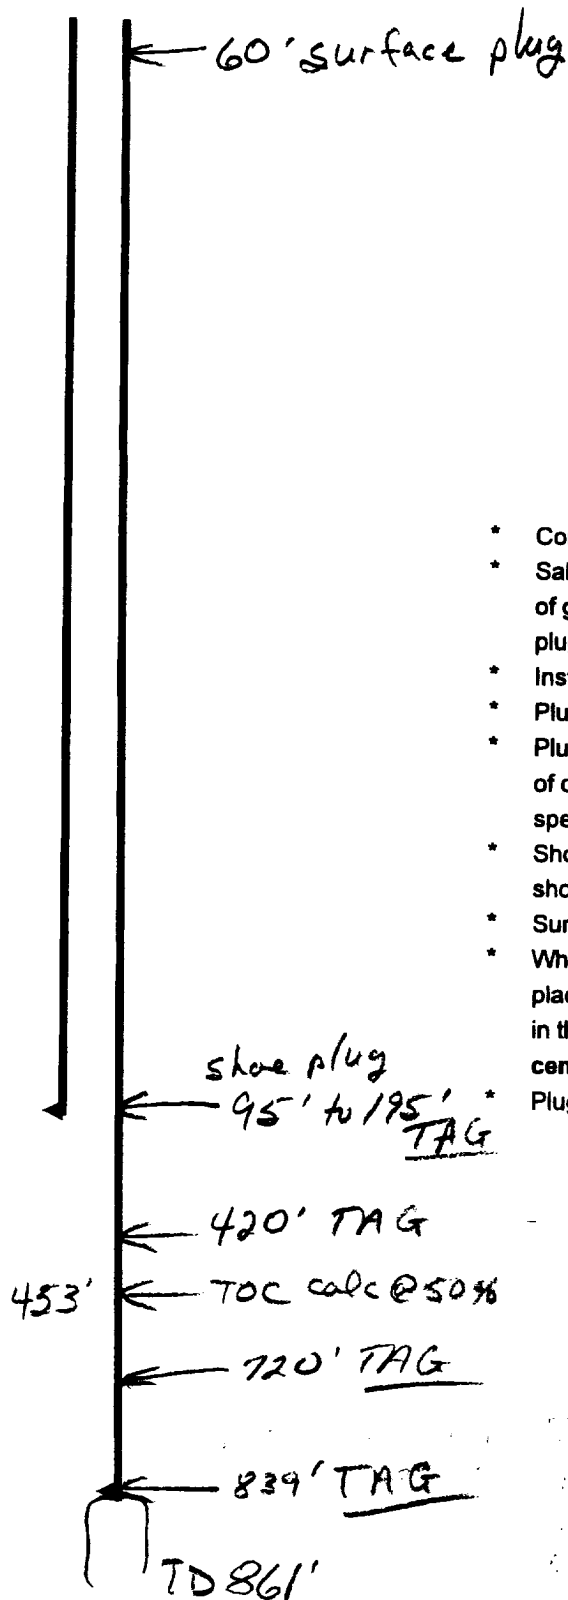

MLB