


Operator Yates Drilling Co.
 Well Yates Fed Deep #1
 Unit D Section S Township 20 Range 20
 API # 30-012-10436

TOPS

Gates	~ Sea
Queen	~ 1200
San Andres	? 1600
Bone Spring	~ 3600
Wetmore	7720
Penn	8365
Concho	"
Strawn	8941
Atoka	9678
Morgan	10003
Morgan Claiborne	10169
Muskogee	10693

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

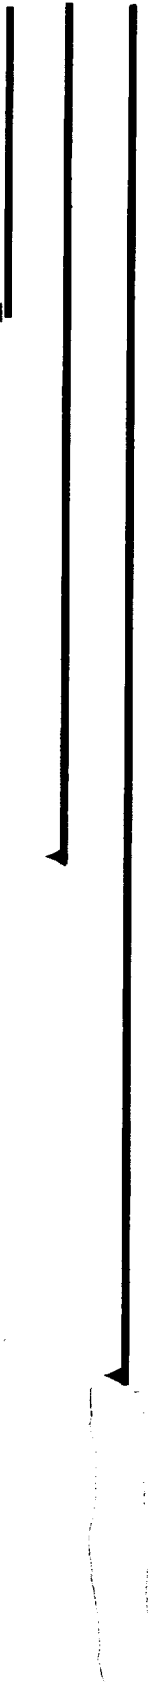

1534 7720
 3000

9518 8365
 7720
 CIRC

5117 8365
 7720

10714