

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

BLM CONSERVATION DIV
811 S. 1st ST.
ARTESIA, NM 88210-2834

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☐ Oil Well ☒ Gas Well ☐ Other

2. Name of Operator

Harvey E. Yates Company

3. Address and Telephone No.

P.O. Box 1993, Roswell, NM 88202 1-505-623-6601

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

G, 1980' FN & EL
SW/NE SEC. 31, T-20S, R-29E

5. Lease Designation and Serial No.

NM-19672

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

FANNIE LOU FEDERAL # 1

9. API Well No.

30-015-21617

10. Field and Pool, or Exploratory Area

SCANLON MORROW

11. County or Parish, State

EDDY CO., NM

12. CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

TYPE OF ACTION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment

- ☐ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☒ Other P&A

- ☐ Change in Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well
Completion or Recompletion Report and Log Form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

SURFACE PIPE @ 695'

INTERMEDIATE CASING @ 3207'

CURRENT PERFS 5671-90. 5' DELAWARE.


1. SET CIBP @ 5650' PLUS 50' CMT
2. ATTEMPT CUTOFF @ 3200'. IF SUCCESSFUL THEN PULL 4 1/2" CSG. SPOT CMT PLUG 50' IN AND 50' OUT ACROSS STUB. TAG!!!! IF NOT SUCCESSFUL MAKE HIGHER CUT AND PULL CSG. SPOTTING CMT PLUG ACROSS BOTH CUTS. TAG PLUG.
(NOTE: MAKE SURE CMT PLUG IS IN PLACE ACROSS 3207' INTERVAL.)
3. AFTER PULLING CASING. PUMP 100' CMT PLUG FROM 750 TO 650' (ACROSS SURFACE SHOE. TAG PLUG).
4. PUMP 50' SURFACE PLUG. CUT OFF WH AND INSTALL DRY HOLE MARKER.
5. BACKFILL PITS AND CLEAN LOCATION.

ABOVE APPROVED BY JOE LARA (BLM-CARLSBAD) 7-1-96.

CALL BLM CARLSBAD 24 HOURS PRIOR TO COMMENCEMENT @ 1-505-887-6544

14. I hereby certify that the foregoing is true and correct

Signed

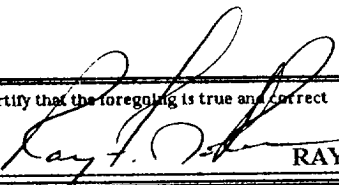

RAY F. NOKES

Title

PROD. MGR./ ENG.

Date 7/1/96

(This space for Federal or State office use)

Approved by

Title

Date 8/1/96

Conditions of approval, if any:

- SEE ATTACHED -