


Western Oil Producers

Hunker "Loma" #1

1980 FSL & 1980 FWL

Sac 35; TS 215, Res 292

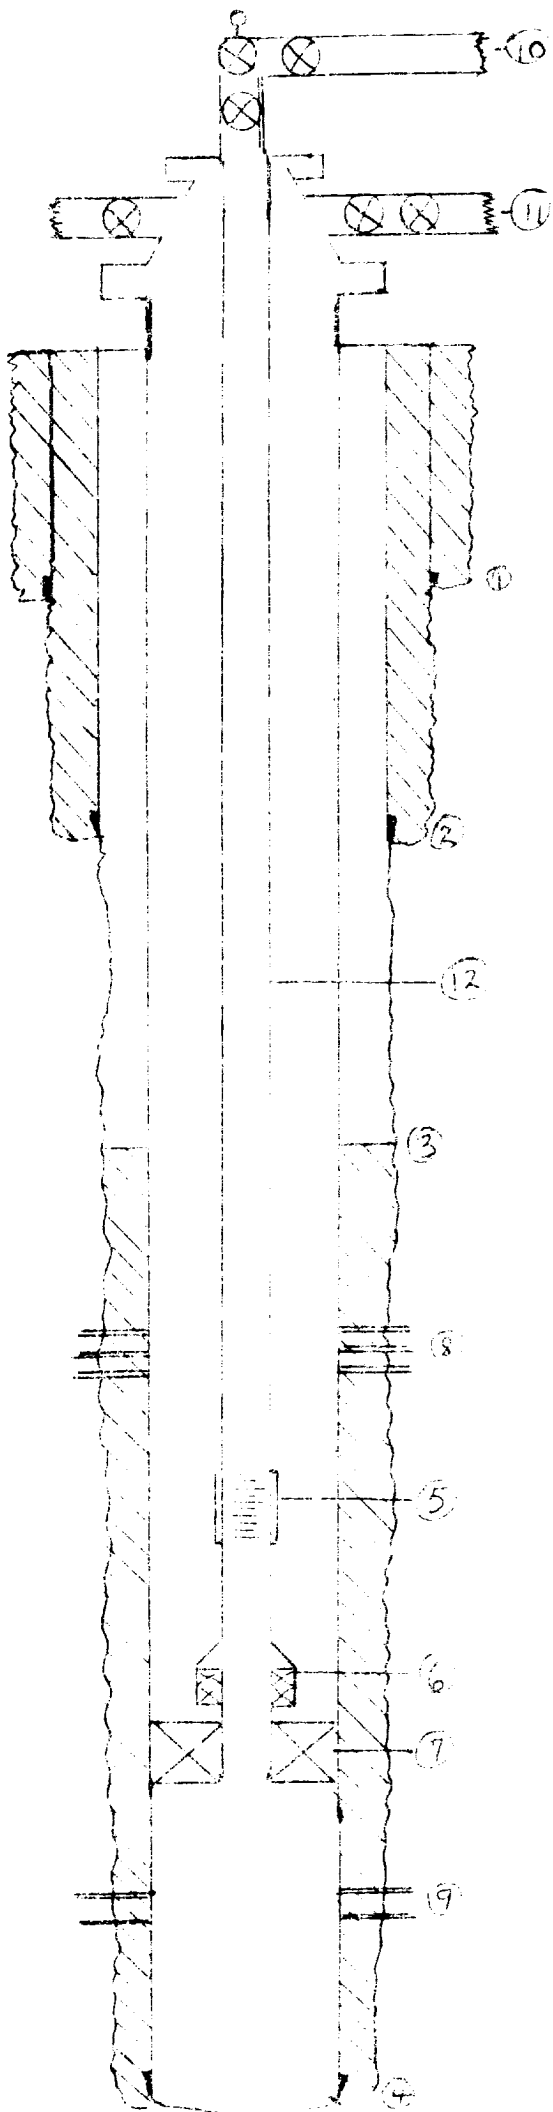

1. Run 525' of 13 7/8" Casing Cemented with 450 SKs. Cement Circulated
2. Run 2650' of 8 1/2" Casing. Cemented with 950 SKs. Cement Circulated.
3. 5 1/2" Cemented with 1200 SKs Class H Cement Top 6300' Bond log top
4. 5 1/2" Set @ 11,875'. Run as follows:
 1525' of 5 1/2", 20# N-80, LTC.
 6371' of 5 1/2", 17# N-80, LTC
 2853' of 5 1/2", 20# N-80, LTC
 1121' of 5 1/2", 20# S-75, LTC
 2' 1-5 1/2" float collar, 1-5 1/2" shoe
5. 1- 2 7/8" Sliding Sleeve XA (OTIS)
6. 1- 5 1/2" Tubing Seal Divider (OTIS) with 2.5" N" Nipple
7. 1- 5 1/2" PL Packer @ 11,442 (OTIS)
8. Wellcamp perforator @ 9,643' to 9,717'
9. Morrow perforations 11,523' to 11,544' 11,681' to 11,695'
10. Morrow outlet thro 2 7/8" tubing
11. Wellcamp outlet thro casing and tubing annulus.
12. 2 7/8" tubing N-80 @ 11,409'
 Sliding sleeve @ 11,409'
 Tubing Seal Divider @ 11,440'
 Packer at @ 11,442' - 47'

RECEIVED

JUN 80

ARTESIAN